 







Icon Guide

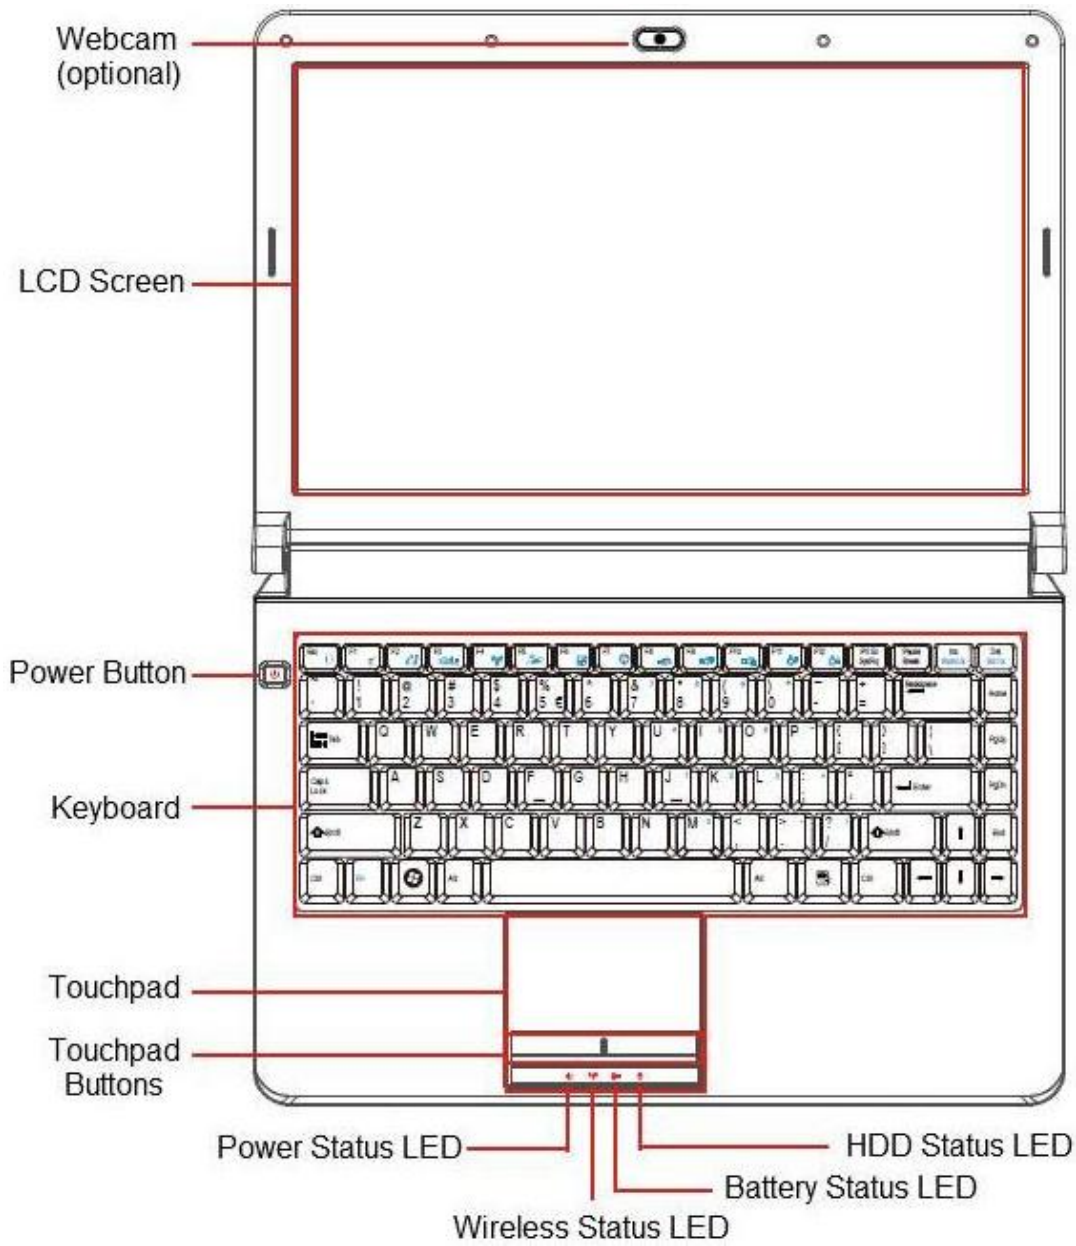

LED Graphic Symbol	Indication
	Blue light indicates the system is ON.
	Blue light indicates the RF (WLAN/Bluetooth) is active.
	Battery status Charging – Blue Full – Blue Low - Red
	Blue light indicates the hard drive and/or optical drive is being accessed.

Function Keys

Fn+Esc Turns the (optional) Bluetooth on and off.

Fn+F1 Puts the computer in sleep mode.

Fn+F2 Battery saver on and off.

Switches display modes:

- Fn+F3**
- Integrated LCD screen only.
 - External VGA only.
 - Both (simultaneous LCD and VGA display).

Fn+F4 Turns the wireless on and off.

Fn+F5 Turns the (optional) 3G on and off.

Fn+F6 Turns the touchpad on and off.

Fn+F7 Turns the webcam on and off.

Fn+F8 Mutes the sound.


Fn+F9 Decreases the volume.

Fn+F10 Increases the volume.


Fn+F11 Decreases screen brightness.

Fn+F12 Increases screen brightness.


Closed Front View

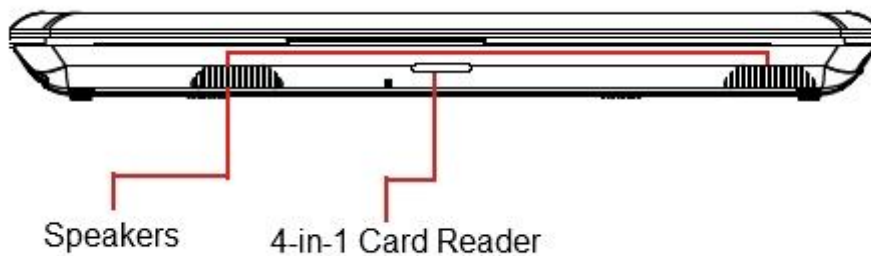

Left View

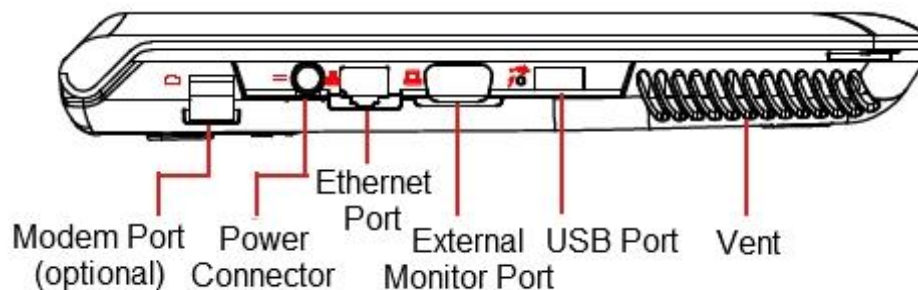

Right View

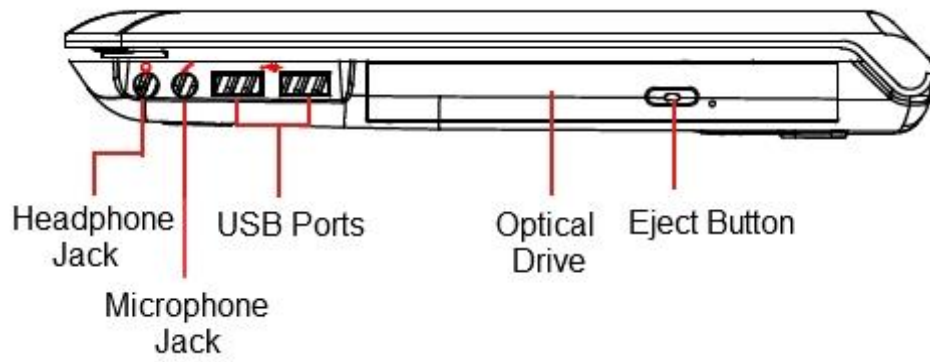

Bottom View

