

## SAFETY FIRST!

- Read all the instructions carefully before using the appliance and keep them for future reference.
- Retain the manual. If you pass the appliance onto a third party, make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

### Damage

- Please inspect the appliance for damage after unpacking.
- Do not continue to operate the appliance if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

### Location of Appliance

- The appliance must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the appliance on sloped or unstable surfaces as the appliance may fall off or tip over.
- The mains socket must be located near the appliance and should be easily accessible.
- This appliance is designed for indoor use only.

### Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the appliance well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.
- Do not touch hot surfaces. The temperature of accessible surfaces may be very high when the appliance is operating. Use handles only.

### Naked Flames

- Never place any type of candle or naked flame on the top of or near the appliance.

### Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this appliance to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the appliance.
- If you spill any liquid into the appliance, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

### Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this appliance in a bookcase, built-in cabinet or in another confined space. Ensure the appliance is well ventilated.

### Safety

- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always disconnect the appliance from the mains supply before moving the appliance.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the appliance unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Disconnect the mains plug from the mains socket.
- Bread may burn. Your appliance must not be used near or below curtains or other combustible materials. It must be watched when in use.
- Only place toast bread in your appliance. Do not attempt to toast any pastry or bread product which is filled with a fruit or sugary filling (pop tarts etc). The stuffings may leak and cause damage to your appliance or cause a fire risk.
- Oversize food, metal foil packages or utensils must not be inserted in the appliance as they may cause fire or electric shock.
- Don't attempt to dislodge food while the appliance is operating.
- Take the bread out carefully after toasting to avoid injuries.
- Do not use the appliance for uses other than its intended use.

### Mains Cable

- Make sure the appliance or appliance stand is not resting on top of the mains cable, as the weight of the appliance may damage the mains cable and create a safety hazard.
- Do not let the mains cable overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

GB-4

## SAFETY FIRST! (Cont)

### Supervision

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

### Service

- To reduce the risk of electric shock, do not remove screws. The appliance does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

### Maintenance

- Ensure to unplug the appliance from the mains socket before cleaning.
- Allow the appliance to cool completely before cleaning or storing.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the appliance's surface.
- Do not use liquids to clean the appliance.

## SPECIFICATIONS

Mains supply : 230V~ 50Hz  
Power consumption : 800W

We continually strive to improve our products, specifications may change without prior notice.



Visit [Partmaster.co.uk](http://Partmaster.co.uk) today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit [www.partmaster.co.uk](http://www.partmaster.co.uk) or call 0870 6001 338 (UK customers only) Calls charged at National Rate.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

DGS Retail Ltd • Maylands Avenue • Hemel Hempstead •  
Herts • HP2 7TG • England

GB-5

# Sandstrøm Instruction Manual

## Aluminium 2 Slice Toaster

S02AT10



## Congratulations on the purchase of your new Sandstrøm Toaster.

We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

## UNPACKING



Remove all packaging from the toaster. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

- The Main Unit
- Instruction Manual (P.N.: S02AT10-001)

If items are missing, or damaged please contact Partmaster (UK only).  
Tel: 0870 6001 338 for assistance.

## PRODUCT OVERVIEW

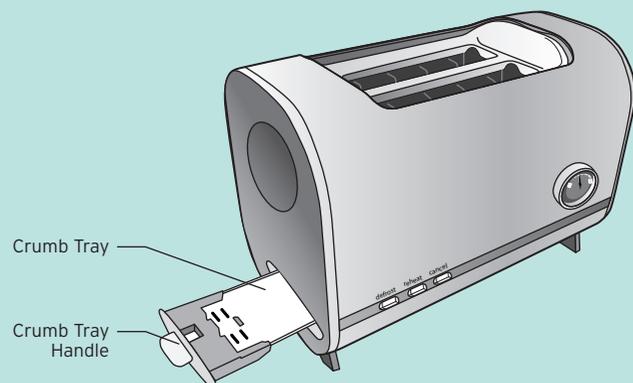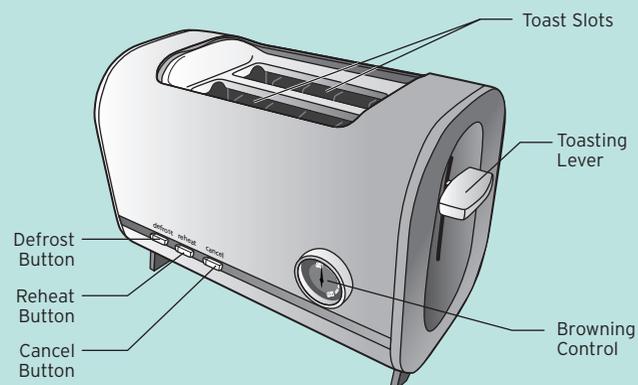


## FIRST TIME USE

The first time you use your toaster we suggest that you operate it following the **TOASTING BREAD** steps, except without bread. Please note there may be manufacturing residue or oil remaining in the toaster or heating element. Odour may be emitted the first time you use it. This is normal and will not occur after using your toaster for several times.

GB-1

## TOASTING BREAD


To prevent jamming do not use your toaster with torn slices of bread. Make sure the size and thickness of the slices of bread fit easily into the toast slots. Always watch your toaster when in use. Never leave your toaster unattended.

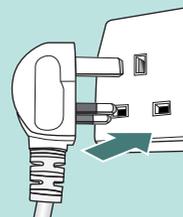

1. Unwind the mains cable from the bottom of the toaster. Plug the mains plug into the mains socket.


2. Put 1 or 2 slices of bread into the bread slots.

- Tips: a) If toasting two slices, they should be similar in size, thickness and freshness.  
b) For optimum browning, always place the bread as close as possible to the centre of the slots.  
c) Make sure the crumb tray is completely inserted before use.

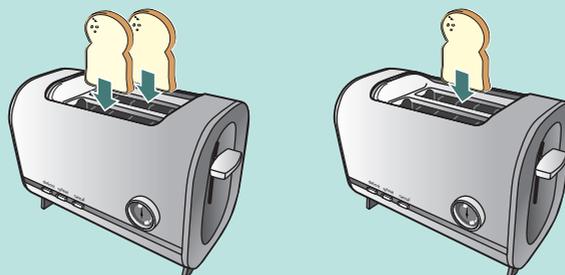


3. Select the level of browning by turning the Browning Control.

 - Tips: a) Select a lower position for light browning, especially for toasting only one slice or for dry (old) bread. Note that the toasting colour for one slice will be darker than that for two slices at the same level.  
b) If you have already toasted some bread, the toaster elements will be hot, so when you put some more bread into the toaster it may become browner faster than the first slices that were toasted, even if the Browning Control is set to the same level.



4. Lower the toasting lever down vertically until it is positioned in place. The toaster will begin at once.

- Tips: a) Only when the toaster is connected to the mains power, can the toasting lever be locked in the downward position.  
b) During the toasting process, you may observe the toasting colour. Press the CANCEL button to cancel the operation at any time if you are satisfied with the colour.

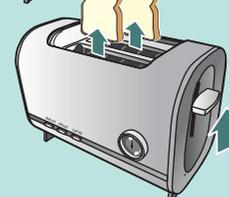

5. Once the bread has been toasted to the preset browning level, the toasting lever will automatically pop up.

GB-2

## OTHER FUNCTIONS

### Defrost




Insert the frozen bread. Set the browning control to your desired colour. Lower the toasting lever down until it remains in a downward position, then press the DEFROST button. The indicator will illuminate. In this mode, the frozen bread will be toasted to your desired colour.

### Reheat

Insert the cold slices of toast and lower the toasting lever until it remains in a downward position. Press the REHEAT button. The indicator will illuminate. In this mode, setting the browning control will have no effect as the toasting time is fixed. When the time runs out, the toasting lever will automatically pop up and finish the reheating process.


### Cancel

If the toaster starts to smoke, press the CANCEL button to stop toasting immediately. Remove all protective wrapping prior to putting the bread into the toaster. Avoid toasting the food with extremely runny ingredients such as butter. The bread slot is only applicable for toasting regular bread slices. Do not toast irregular sized bread.

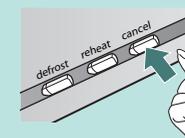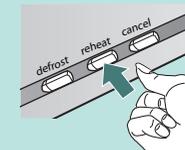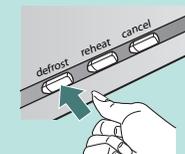

## REMOVING CRUMBS FROM THE TOASTER

1. First remove the mains plug from the mains socket.
2. Slide the crumb tray out by holding the crumb tray handle. (The metal part may be hot.)
3. Empty the crumbs into the bin and clean the crumb tray.

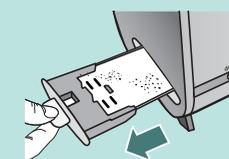

Let the crumb tray dry thoroughly before reinserting it back into the toaster. Ensure the crumb tray is completely inserted before using your toaster again.

## HOW TO CLEAR A PIECE OF BLOCKED BREAD

1. Remove the mains plug from the mains socket.
2. Allow the toaster to completely cool down.
3. Push and hold the toasting lever down then release.
4. Gently dislodge the blockage with a non-metallic object, for example the handle of a wooden spoon.



Ensure you don't make contact with the heating elements, as you may damage them.

5. Lift the toasting lever to remove the blockage.

## CLEANING AND MAINTENANCE

Remove the mains plug from the mains socket and allow the toaster to cool down before cleaning.

Do not use harsh cleaners or solvents as they may damage the casing.

The body of the toaster should be cleaned using a cloth dampened with warm water and detergent. Make sure you do not allow water to seep into the controls or heating elements.

When not in use, the mains cable may be wound under the bottom of the toaster.

GB-3