

currys essentials

PORTABLE DVD PLAYER

INSTRUCTION MANUAL
C7PDVD10





Contents

Unpacking	5
Product Overview	6
DVD Player	6
Remote Control	7
Battery Installation for the Remote Control	8
Remote Control Operation Range	8
Power Supply	9
Using the Mains Adapter (for indoor use)	9
Using the Car Power Adapter (for in-car use)	9
Connections	10
Connecting a TV	10
Watching a DVD on your TV	10
Using Earphones	10
Compatible Disc Types	11
Supported Formats	11
Region Code	11
Turning On the DVD Player	12
Basic Playback	12
Playing a Disc	12
Using the Disc Menu	12
Pausing Playback	12
Selecting Title / Chapter / Track (for DVD)	13
Selecting Track / Time / Disc Time (for CD)	13
Stopping Playback	13
Skip (Forward / Reverse)	13
Fast Forward / Fast Reverse	13
Repeat Play Mode	14
Slow	14
Angle Selection	14
Audio Selection	15
Subtitle Selection	15
Viewing the Disc Playback Information	15
Programmable Memory	15
Zoom Selection	16
Adjusting the LCD Screen	16
Repeat a Specific Section	16
TITLE	16

Using a USB Flash Drive or and SD/MMC/MS Card.....	17
General Operation	17
Using the Language Setup Menu	18
OSD Language	18
Subtitle / MPEG4 Subtitle / Audio / DVD Menu.....	18
Using the Video Setup Menu	18
Aspect Ratio	19
View Mode	19
TV System.....	19
Using the Audio Setup Menu	19
Using the Rating Setup Menu	20
Parental Control Settings.....	20
Set Password	21
Using the Misc Menu	21
Maintenance	22
Hints and Tips	23
Specifications.....	25
Safety Warnings.....	26

Thank you for purchasing your new Currys Essentials Portable DVD Player.

These operating instructions will help you use it properly and safely.


We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose it please do so according to local regulations.

The following items are included:

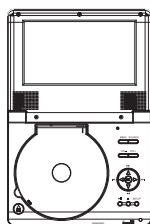


DVD Player

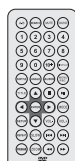

Remote Control
(P.N.: 1706-054009-08R)



Mains Adapter
(P.N.: 5323-079515-02R)

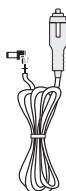

Car Power Adapter
(P.N.: 5338-081330-20R)



Instruction Manual
(P.N.: 1600-196H53-01R)




Quick Start Guide
(P.N.: 1601-196H53-02R)



If items are missing, or damaged please contact Partmaster (UK only).
Tel: 0844 800 3456 for assistance.


Product Overview

DVD Player

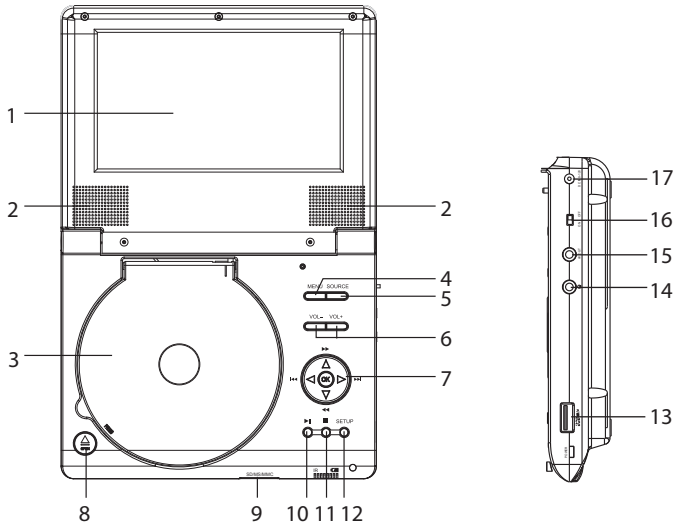

1. **LCD Screen**
2. **Speaker**
3. **Disc Door**
Push to close the disc door.
4. **MENU / PBC Button**
PBC on / off switch. Return to DVD root menu (DVD).
5. **SOURCE Button**
Select among the different input sources: DVD / CARD / USB.
6. **VOL + / - Button**
Adjust the volume.
7. **Cursor (▲, ◀, ▶, ▼) Buttons**
Move between selections on a menu screen and adjust certain settings.
 - ▲▼ Button
Press to perform fast forward / fast reverse playback.
 - ◀▶ Button
Move back to the beginning of the current chapter/tracks / titles or move forward to next chapters/tracks/titles on a disc.
 - OK Button
Confirm selections on a menu screen.
8. **▲ Open Button**
Press to open the disc door.
9. **SD/MS/MMC Port**
10. **▶▶ PLAY / PAUSE Button**
Press to start playback or pause.
11. **■ STOP Button**
Stop playing a disc.
12. **SETUP Button**
Display the SETUP menu.
13. **USB Port**
14. **🎧 Earphone Socket**
15. **AV OUT Socket**
16. **POWER ON/OFF Switch**
17. **DC IN 9-12V Socket**

 
Remote Control

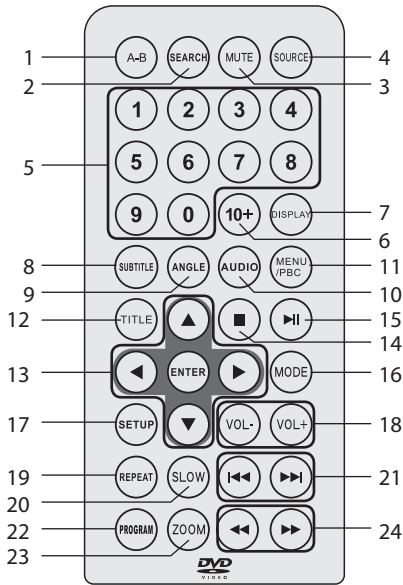

1. **A-B Button**
Perform point-to-point repeat playback on a DVD or CD.
2. **SEARCH Button**
To search and start playback from a selected point on the disc.
3. **MUTE Button**
To mute and restore your DVD sound output.
4. **SOURCE Button**
Select among the different input sources: DVD / CARD / USB.
5. **0 - 9 Number Buttons**
Create programs or locate a title/ chapter/track or specific time.
6. **10+ Button**
Select and switch to a track that is higher than 10.
7. **DISPLAY Button**
To display the playtime and show status information on the screen.
8. **SUBTITLE Button**
Select one of the subtitle languages programmed on a DVD (if available).
9. **ANGLE Button**
Switch between multiple camera angles when the DVD you are playing has been programmed with multiple camera angle.
Press repeatedly to select the slide show mode in playing JPEG pictures.
10. **AUDIO Button**
Select one of the audio sound tracks on a DVD (if more than one is available) or select the audio output mode on a CD.
11. **MENU / PBC Button**
Enter and exit the main DVD menu. PBC on / off switch. Return to DVD root menu (DVD).
12. **TITLE Button**
Return to DVD Title Menu.
13. **Cursor (▲, ◀, ▶, ▼) Buttons**
Move between selections on a menu screen and adjust certain settings.
- ENTER Button**
Confirm selections on a menu screen.
14. **■ STOP Button**
Stop playing a disc.
15. **▶|| PLAY / PAUSE Button**
Press to start playback or pause.
16. **MODE Button**
Adjust Brightness, Contrast, Hue and Saturation of the LCD screen.
17. **SETUP Button**
Display the SETUP menu.
18. **VOL + / - Button**
Adjust the volume.
19. **REPEAT Button**
Repeat a DVD chapter or title.
Repeat a CD track or the entire disc.
20. **SLOW Button**
Press repeatedly to enter slow playback, and cycle between different speeds.
21. **◀◀▶▶ Buttons**
Press to perform fast forward / fast reverse playback.
22. **PROGRAM Button**
Store the favourite tracks from the disc in DVD / VCD / CD mode.
23. **ZOOM Button**
To enlarge the picture.
24. **◀◀ / ▶▶ Buttons**
Press the skipping back / ahead at 5-level speed (x2, x4, x8, x16).

Battery Installation for the Remote Control

1. Press and lift the back cover up to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the battery compartment.

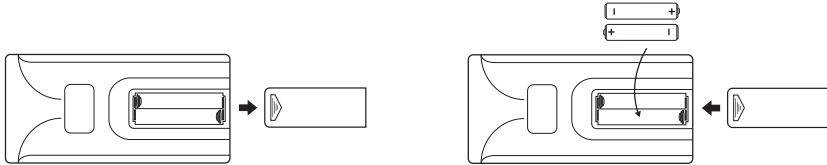

3. Close the battery compartment cover.

Handling the Batteries


- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- When the batteries are exhausted, the remote will not function. Replace both batteries at the same time with new ones.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

Handling the Remote Control

- Take care of your fingernails when you press and hold the battery release tab.
- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as it could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.


Remote Control Operation Range

Point the remote control at the DVD player no more than 2 metres from the remote control sensor and within 40° of the front of the DVD player. The operating distance may vary depending on the brightness of the room.

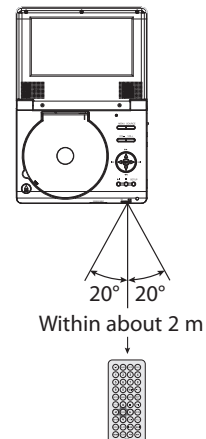

Power Supply


Using the Mains Adapter (for indoor use)

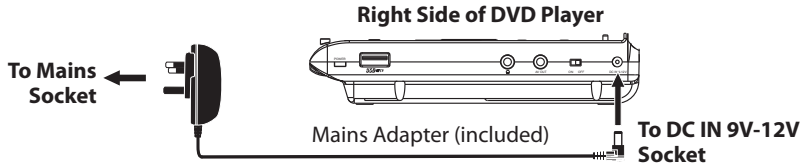

- Only use the included mains adapter. Do not use it with any other equipment.
- When the unit is not going to be used for a long period of time, disconnect the mains adapter from the mains socket.
- When the mains adapter is plugged in, the unit is not completely disconnected from the main power supply, even when the power is turned off.
- In order to disconnect the unit from the mains completely, the mains adapter should be disconnected from the mains socket outlet completely.

Using the Car Power Adapter (for in-car use)

The 12V car power adapter allows the unit to be used with vehicles that have a 12V, negative ground electrical system.

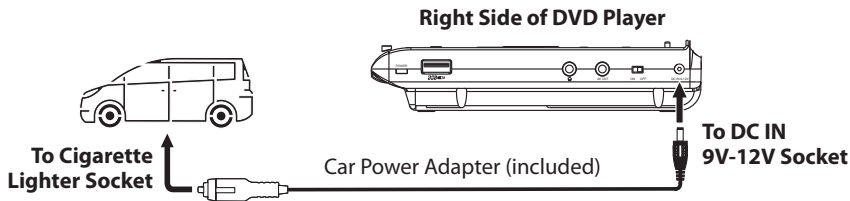


- Disconnect the car power adapter when not in use. Not for use in 24V vehicles.
- Use the provided 12V car power adapter only. Use with other car power adapters could damage the unit.
- Only use the included 12V car power adapter. Do not use it with any other equipment.
- In the interest of traffic safety, do not operate this unit or view videos while driving a vehicle.
- Make sure the unit is securely fastened to prevent it from falling or flying through the air in the event of an accident.
- When the inside of the cigarette lighter socket is dirty with ash or dust, the plug section may become hot due to poor contact. Be sure to clean the cigarette lighter socket before use.
- After use, disconnect the 12V car power adapter from both the unit and the cigarette lighter socket.

Connections

Connecting a TV

If your TV has audio/video inputs, you can connect the unit to your TV using a standard Audio / Video Cable.

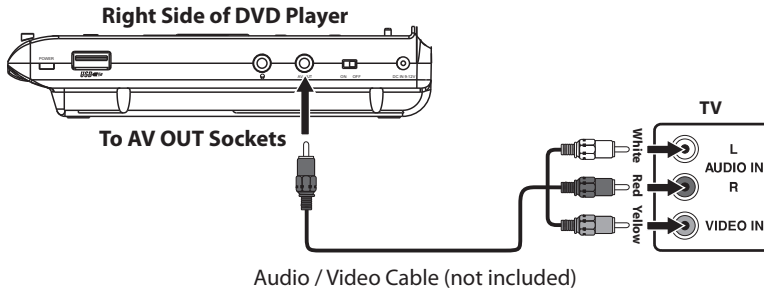


Watching a DVD on your TV

1. Turn on the unit.
2. Turn on the TV and follow the instructions included with it to play the DVD.

! Everytime you power off the unit you will need to reset the Video Out function.





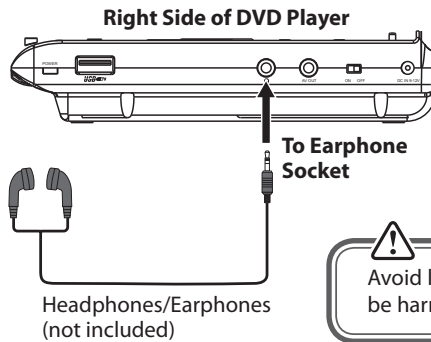

Using Earphones

- Turn down the volume before connecting, and then adjust the level.
- When earphones are connected, no sound will be emitted from the unit's speaker.



! Avoid listening to sound at levels which may be harmful to your ears.

Compatible Disc Types

Disc Types	Disc Logo	Recorded Content
DVD-VIDEO (Digital Versatile Disc)		AUDIO + VIDEO
DVD±RW (Audio/Video format or JPEG files)		AUDIO + VIDEO + JPEG
DVD±R (DVD Recordable - Audio/Video format or JPEG files)		AUDIO + VIDEO + JPEG
CD-R (CD Recordable - Audio/Video format or JPEG files)		AUDIO + VIDEO + JPEG
CD-RW (CD-Rewritable - Audio/Video format or JPEG files)		AUDIO + VIDEO + JPEG
AUDIO-CD (Compact Disc Digital Audio)		AUDIO

Supported Formats

JPEG

- The file extensions has to be .jpg and not .jpeg
- Pictures encoding must comply with JPEG/ISO format.




Only finalised discs of DVD-R and DVD-RW multi-border are supported.
Both finalised and un-finalised discs of DVD+R and DVD+RW multi-border are not supported.
Some recorded files may not be able to be played due to the type and format of disc or condition of the recording.

Region Code

Both the DVD player and the discs are coded by region. These regional codes must match in order to play the disc. If the codes do not match, the disc will not play.

The Region Number for this DVD player is described on the rear panel of the DVD player.

Disc Type	DVD-VIDEO
Region code	

Turning On the DVD Player

1. Switch the **ON/OFF** button to **ON** on the side panel to turn the DVD player on.
2. The DVD logo (start-up picture) will appear on the screen.
3. After use, switch the **ON/OFF** button to **OFF** on the side panel to turn the DVD player off.



Basic Playback

This instruction manual explains the basic instructions for operating this unit. Some DVDs are produced in a manner that allows for specific or limited operation during playback. Therefore, this unit may not respond to all operating commands. This is not a defect.

Please refer to the instructions accompanying the specific DVD in question for more information about the options available on that DVD.

Unless otherwise stated, all operations described are based on Remote Control use.

Playing a Disc

1. Make sure your unit is either plugged into the power socket or the battery is fully charged. Switch the **ON/OFF** button to ON to turn your DVD player on.
2. Open and adjust the screen angle.
3. Press the **▲** button on the front panel to open the disc tray. Put the disc (labelled side upwards) into the disc tray.
4. Hold the disc by its sides and carefully place onto the spindle with the label side facing up. Gently push the disc down until you hear a "click".
5. Close the disc door. It takes a short while for your unit to load the disc. After loading, the unit will automatically display the main menu of the DVD or start playing the DVD. If the unit does not automatically start playing the DVD, press the **▶||** button.

Using the Disc Menu

Depending on the disc, a menu may appear on the screen once you load the disc.

1. To select a playback feature or item, use the **▲ ◀ ▶ ▼** buttons or the **0-9** buttons and then press the **OK** button on the DVD player or the **ENTER** button on the remote control to start playback.
2. Press the **MENU/PBC** button to access / exit the menu.

Pausing Playback

1. Press the **▶||** button to start playback.
2. During playback, press the **▶||** button to pause current playback.
3. Press the **▶||** button again to resume playback.

Selecting Title / Chapter / Time (for DVD)

1. Press the **◀◀▶▶** buttons to go to the previous or next title / chapter / time.
2. Press the **SEARCH** button to display the disc information text line for title / chapter / time .
3. Use the **0-9** buttons to enter valid title / chapter / time number and then press the **ENTER** button. The playback skips to the selected title / chapter / time.

Selecting Track / Time / Disc Time (for CD)

1. Press the **◀◀▶▶** buttons to go to the previous or next track / time / disc time.
2. Press the **SEARCH** button to display the disc information text line for track / time / disc time.
3. Use the **0-9** buttons to enter valid track / time / disc time number and then press the **ENTER** button. The playback skips to the selected track / time / disc time.

Stopping Playback

1. Press the **■** button once to pause playback. Press the **▶||** button to continue playback.
2. Press the **■** button twice to completely stop playback.

Skip (Forward / Reverse)

1. Press the **◀◀** button to move back to the beginning of the current chapters/titles for a DVD; and to move back to the previous track for a CD.
2. Press the **▶▶** button to move forward to next chapters/tracks/titles.
3. For audio CDs, use the number buttons on the remote control to play the desired track immediately.

Fast Forward / Fast Reverse

You can fast forward or fast reverse a disc during playback and select a desired search speed.

1. Press the **◀◀▶▶** buttons during playback to select the required speed: X2, X4, X8 or X16 (backward or forward). Sound will be muted (DVD) or intermittent (CD).
2. To return to normal speed, press **▶||** the button.

Repeat Play Mode


The repeat play options vary depending on the disc type.

While playing a disc, press the **REPEAT** button repeatedly to choose a repeat option.

For DVD	<ul style="list-style-type: none"> • Repeat Chapter (currently playing chapter) • Repeat Title (currently playing title) • Off (Cancel)
For CD	<ul style="list-style-type: none"> • Repeat Single (currently playing file) • Repeat Folder (currently playing folder) • Off (Cancel)

Slow


Press the **SLOW** buttons when a disc is playing to enter slow playback. Each time you press the **SLOW** buttons, the playback speed changes in the following sequence:

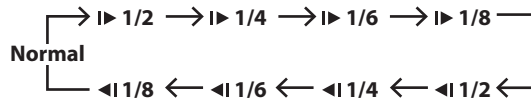

Angle Selection

Some DVDs contain scenes which have been shot from a number of different angles. For these discs, the same scene can be viewed from each of these different angles.

1. While you are playing a DVD with different angles recorded, press the **ANGLE** button to view the number of current angles available.
2. Press the **ANGLE** button repeatedly to change the scene to the next recorded angle.
 - After approximately two seconds, playback will continue from the new angle you selected.

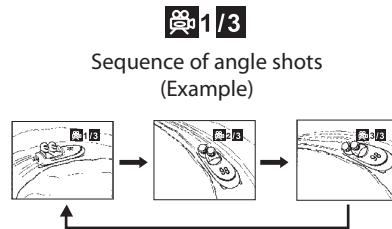

In JPEG mode, press the ANGLE button repeatedly to select the slide show type.



- This function can only be used for discs on which scenes shot from multiple angles have been recorded.
- If only one angle is recorded, "1/1" is displayed.

Audio Selection

For DVD	Press the AUDIO button repeatedly to select different audio languages.
For CD	Press the AUDIO button repeatedly to select the available audio channels provided by the disc (Left, Right, Mix, Stereo).



- If only one audio format is recorded on the DVD, the number does not change.
- It takes about 2 seconds for playback to continue in the new audio format.

Subtitle Selection

Press the **SUBTITLE** button repeatedly to select the desired subtitle language.



- If only one language is recorded, the language does not change.
- The number of languages recorded differs depending on the disc.
- This function can only be used for discs on which subtitles have been recorded in multiple languages.
- On some DVDs, subtitles are activated from the main menu of the DVD. Press the **MENU/PBC** button to activate the main menu.

Viewing the Disc Playback Information

You can view the disc information (such as current title / chapter, total playing time or remaining time on the disc) without interrupting the disc playback.

During playback, press the **DISPLAY** button once to display Time / Title / Chapter. Press the **DISPLAY** button twice to display Audio / Subtitle / Angle / Bitrate. Press the **DISPLAY** three times to resume playback.

Programmable Memory

The program function enables to store the favourite tracks from the disc.

1. Press the **PROGRAM** button to display the PROGRAM MENU.
2. Press the **0-9** buttons to direct input the titles / chapters / track number and then press the **▶||** button to select START.
3. To resume normal playback, press the **PROGRAM** button and then press the **▲▼** buttons to select CLEAR PROGRAM option on the program menu. Press the **PROGRAM** button again to exit PROGRAM MENU.

Zoom Selection

This function allows you to enlarge or shrink the video image or picture on the screen.

During playback, press the **ZOOM** button repeatedly to display the picture with different scales (2X size, 3X size, 4X size, Normal size).

Adjusting the LCD Screen

You can adjust the Brightness, Contrast and Colour of the LCD screen.

1. Press the **MODE** button.
2. Press the **▲▼** buttons to select Brightness, Contrast or Colour.
3. Press the **◀▶** buttons to change the setting.
4. Press the **MODE** button to exit the menu.

Repeating a Specific Section

You can play a specific section repeatedly.

1. While the disc is playing, press the **A-B** button at the beginning of the section you want to play repeatedly.
2. Press the **A-B** button again at the end of the section.
3. The unit will immediately begin replaying your selection.

To resume normal playback, press the **A-B** button.

TITLE


Press the **TITLE** button to return to DVD title menu.

Using a USB Flash Drive or and SD/MS/MMC Card

General Operation

You can play or view data files (JPEG) from USB flash drives or SD/MS/MMC cards.

1. Connect the USB flash drive or SD/MS/MMC card directly to the USB port or SD/MS/MMC port on the DVD player.

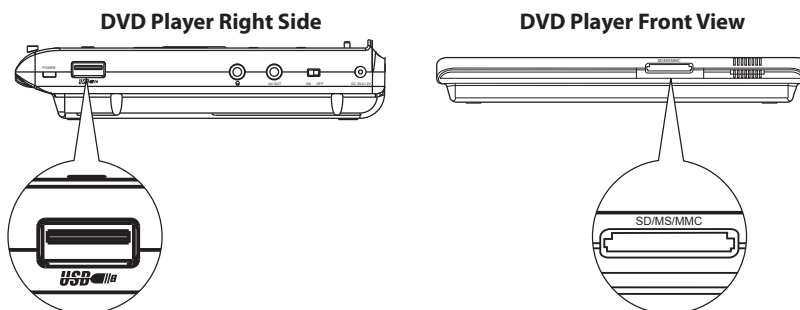


2. Press the **SOURCE** button to access the data in the drive.
3. Use the **▲▼** buttons to select a desired file and then press the **OK** button on the DVD player or the **ENTER** button to start playback.

To remove the USB drive or SD/MS/MMC card, press the **■** button to stop playback. Remove the USB flash drive or SD/MS/MMC Card from its port, the DVD play will then automatically return to disc mode.

Using the Language Setup Menu

1. Press the **SETUP** button to display the system setup menu.
2. Press the **▲▼** buttons to select **Language** and then press the **▶||** button.
3. Press the **▲▼** buttons to select **Language / Subtitle / MPEG4 subtitle / Audio / DVD menu** and then press the **ENTER** button to access.

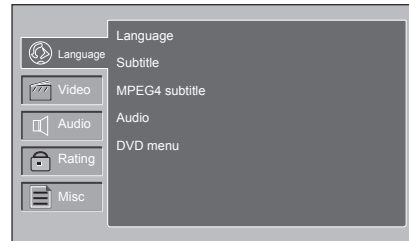

- The options for the selected item appears.
 - If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.
4. Use the **▲▼** buttons to select a setting and then press the **ENTER** button to confirm.
 5. Press the **SETUP** button to exit.

OSD Language


This menu contains various language options for the language displayed on the screen.

Subtitle / MPEG4 Subtitle / Audio / DVD Menu

These menus contains various language options for audio, subtitle and disc menu which may be recorded on the DVD.

Using the Video Setup Menu

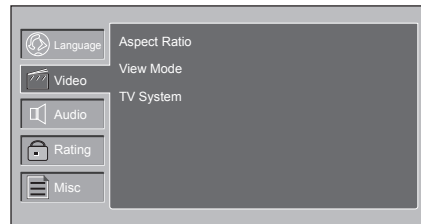

1. Press the **SETUP** button to display the system setup menu.
2. Press the **▲▼** buttons to select **Video** and then press the **▶||** button.
3. Press the **▲▼** buttons to select **Aspect Ratio / View Mode / TV System** and then press the **ENTER** button to access.



- The options for the selected item appears.
 - If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.
4. Use the **▲▼** buttons to select a setting and then press the **ENTER** button to confirm.
 5. Press the **SETUP** button to exit.

Aspect Ratio

The picture shape can be adjusted to fit your screen and the format must be available on the playback disc. Otherwise, the TV display will not affect the picture during playback.

4:3	The picture is reproduced in 4:3 format and a black band is displayed on either side of the picture.	
16:9	The picture is displayed in the original proportions of images transmitted in 16:9 format.	

View Mode

Use view mode to scale an image that fits to the screens' width and height.


Fill	This selection will allow you to view the picture in full screen.
Original	Select this to fit the original screen size (only for JPEG).
Height Fit	Select this to take the maximum value of vertical fit scale ratio.
Width Fit	Select this to take the maximum value of horizontal fit scale ratio.
Auto Fit	Select this to take the minimum value of horizontal and vertical fit scale ratio (like letter box).
Pan Scan	Select this to take the maximum value of horizontal and vertical fit scale ratio.

TV System

Select the colour system that corresponds to your TV when AV outputs. This DVD player is compatible with both NTSC and PAL.


Using the Audio Setup Menu

1. Press the **SETUP** button to display the system setup menu.
2. Press the **▲▼** buttons to select **Audio** and then press the **▶||** button.
3. Select **Smart sound** and then press the **ENTER** button to access.
 - The options for the selected item appears.
 - If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.
4. Use the **▲▼** buttons to select **Off / Classical / Rock / Jazz / Pop** and then press the **ENTER** button to confirm.
5. Press the **SETUP** button to exit.

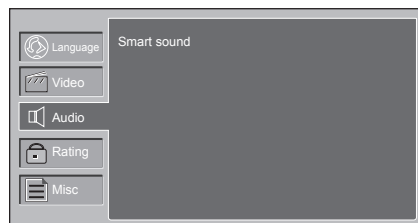

Using the Rating Setup Menu

1. Press the **SETUP** button to display the system setup menu.
2. Press the **▲▼** buttons to select **Rating** and then press the **▶||** button.
3. Press the **▲▼** buttons to select **Parental control / Set password**, and then press the **ENTER** button to access.
 - The options for the selected item appears.
 - If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.
4. Use the **▲▼** buttons to select a setting and then press the **ENTER** button to confirm.
5. Press the **SETUP** button to exit.

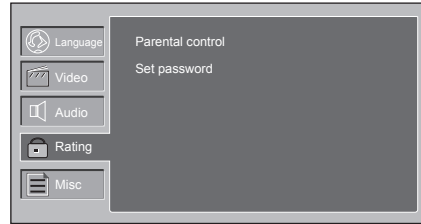

Parental Control Settings

Depending on the DVD, you may be asked to change the parental level while playing the disc. The parental levels are rated from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children, or have certain discs played with alternative scenes.

1. Use the **0-9** buttons to enter the four-digit password and then press the **ENTER** button. If you forget your old four-digit pass word, enter the default password 1369.
2. Use the **▲▼** buttons to select a parental level and then press the **ENTER** button to confirm.

1 Kid Safe	Childsafe; acceptable for viewers of all ages.
2 G	General Audience; recommended as acceptable for viewers of all ages.
3 PG	Parental Guidance suggested.
4 PG-13	Unsuitable for children under age 13.
5 PG-R	Parental Guidance; recommended that parents restrict children under 17 from viewing.
6 R	Restricted; recommended only when supervised by a parent or adult guardian.
7 NC-17	No Children under age 17; not recommended viewing for children under age 17.
8 Adult	Mature Material; should be viewed only by adults due to graphic sexual material, violence or language.

- DVDs that are rated higher than the level you selected will not play unless you enter your fourdigit password.
- Select **8 Adult** to disable parental level and allow all discs to play.

Set Password

You need to enter your four-digit password to play a prohibited disc or if prompted for a password.

1. Use the **0-9** buttons to enter the four-digit password and then press the **ENTER** button to confirm.

When doing this for the first time, enter the default password '1369'. If you forget your old four-digit password, enter the default password '1369'.

2. Use the **0-9** buttons to enter the new four-digit password and then press the **ENTER** button to confirm.

Using the Misc Menu

1. Press the **SETUP** button to display the system setup menu.
2. Press the **▲▼** buttons to select **Misc** and then press the **▶** button to select **Use Default Settings**.
3. Press the **ENTER** button and then select "Yes" to reset all the manufacturer's original settings for this DVD player after a few seconds.

Maintenance

Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.



Cleaning Discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.




- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips.

PROBLEM	CAUSE / SOLUTION
No power.	<ul style="list-style-type: none"> • Ensure the car power adapter or the mains adapter is connected. • Make sure that the unit is turned on. • Make sure that you select ON mode.
The remote control does not function.	<ul style="list-style-type: none"> • Use the remote near the unit. • Point the remote at the remote sensor on the unit. • Replace the battery in the remote with a new one. • Make sure the plastic sheet has been removed from the remote control. • Remove any obstacles between the remote and the unit.
Very little or no sound is coming from a DVD.	<ul style="list-style-type: none"> • Make sure the unit is not paused. Press the ► button. • Make sure the unit is not in fast-forward or fast-reverse mode. Press the ► button. • Make sure the AUDIO/VIDEO input/output connections are correct. • The DTS DVD cannot be decoded to have speaker output. • The unit has overheated. Shut it off for 30 minutes to allow it to cool down. • The volume control is located on the side of the unit - please try adjusting this.
No picture.	<p>The region number of the disc doesn't match the region number of this unit.</p> 
The picture is not clear.	<ul style="list-style-type: none"> • The DVD is dirty. Gently clean the disc. • The disc is scratched. • Please adjust the LCD's brightness, contrast, hue and saturation using the MODE button on the remote control.
Loud hum or noise is heard.	<ul style="list-style-type: none"> • The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with alcohol. • Clean the disc.

PROBLEM	CAUSE / SOLUTION
The disc does not play.	<ul style="list-style-type: none"> • There is no disc inside the unit (“No disc” appears on the screen). • Insert the disc correctly with the graphics facing up. • Clean the disc. • A non-valid disc has been inserted, or the disc region number does not match the region number of the unit. • Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again. • It may not be possible to play CD-R/RW or DVD-R/RW in all cases due to the type of disc or condition of the recording. If you are having trouble playing a certain disc, remove the disc and try a different one. Improperly formatted discs will not play on this DVD player.
If no key operation (by the DVD Player and/or the remote control) is effective.	<ul style="list-style-type: none"> • Turn the unit off and then back to on. Alternatively, turn off the unit, disconnect the car power adapter or mains adapter and then re-connect it. (The player may not be operating properly due to lightning, static electricity or some other external factor.

Specifications

Model	C7PDVD10
Electronical Parameters	
Power Requirements	AC 100-240 V , 50/60 Hz
Dimensions (Approx.)	200(L) x 157(W) x 40.3(H) mm
Power Consumption	<10W
Weight (Approx.)	0.73 kg
Operating Humidity	5 % to 90 %
Video Out	1Vp-p (75Ω)
Audio Out	1.4 Vrms (1 KHz, 0 dB)
Audio	Speaker: 1W x 2, Headphones output
System	
Laser	Semiconductor laser, wavelength 650 nm
Signal System	NTSC / PAL
Frequency Response	20Hz to 20 kHz(1dB)
Signal-to-Noise Ratio	More than 80 dB (ANALOG OUT connectors only)
Dynamic Range	More than 85 dB (DVD/CD)
Battery Parameters	
Battery Specifications	Output: 7.4V
Charge / Discharge Time	Standard charge time: 3h ~ 4h

Specifications and external appearance are subject to change without notice.

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains adapter or car power adapter and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/ electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains adapter or car power adapter and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.

Mains Adapter Cable

- Make sure the unit is not resting on top of the mains adapter cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains adapter cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

DVD

Class 1 Laser Product

- This unit utilises a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Before moving the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is not in use.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack devices, heat from other devices may affect the performance of the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

NOTE: If you require a replacement for any of the items listed below, please quote their corresponding part numbers:

Replacement Part	Part Number
Remote Control	1706-054009-08R
Mains Adapter	5323-079515-02R
Car Power Adapter	5338-081330-20R



Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only) Calls charged at National Rate.

Notes for battery disposal

The built-in batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. Contact a qualified technician to remove the built-in battery prior to disposal.

For more information, please contact the local authority or your retailer where you purchased the product.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

All trademarks are the property of their respective owners and all rights are acknowledged.

DSG Retail Ltd • Maylands Avenue • Hemel Hempstead
Herts • HP2 7TG • England

(P.N. 1600-196H53-01R)