

24" HD Ready LED TV with DVD Player

L24FEDN13
L24FEDP13
L24FEDR13
L24FEDW13




1 Unpacking

Remove all packaging from the TV. Retain the packaging. If you dispose of it please do so according to local regulations.


- TV
- TV Stand
- Remote Control/AAA Batteries x 2
- Screw x 3
- Component Adapter Cable (YPbPr)
- Instruction Manual

2 Operating Your Remote Control

1. Press and lift the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.

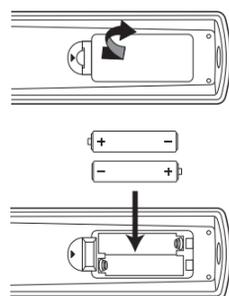

3 Installing the Base Stand

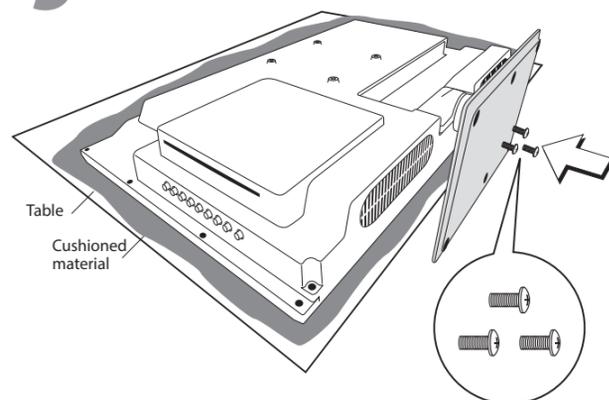


1. Disconnect all cables connected to the TV.
2. Lay the TV down on a flat surface ideally on the edge of a table so the base of the TV slightly overhangs the edge of the table, with the back side facing up. Please make sure a soft cushioned material (such as a dry bath towel or thick piece of foam) is placed beneath the screen.
3. To install the TV stand, place the stand into the stand recess on the back of the TV.
4. Secure the stand using the 3 screws provided.

4 Connecting the Aerial

Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the AERIAL IN socket at the rear right bottom view of your TV.

Do not connect the TV to the mains supply until you have completed all the connections.

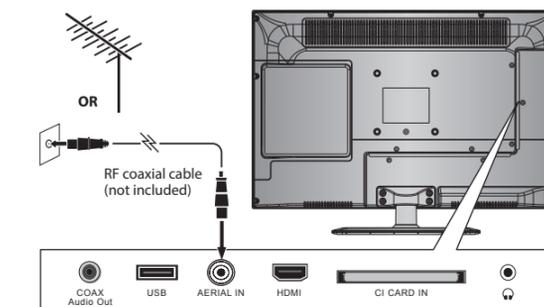


- Only use the included mains adapter. Do not use it with any other equipment.
- Always disconnect the TV from the mains socket when not in use for a long period of time.
- The **STANDBY** button on the front right side panel of the TV or the **⏻** button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.


5 Connecting to the Mains Socket

1. Connect the mains adapter to the mains socket after you have completed all the connections. At this stage, the TV switches to standby mode. The red LED indicator will illuminate on the front panel of the TV.

2. In standby mode, press the **⏻** button on the remote control to turn the TV on. The red LED indicator will turn blue.

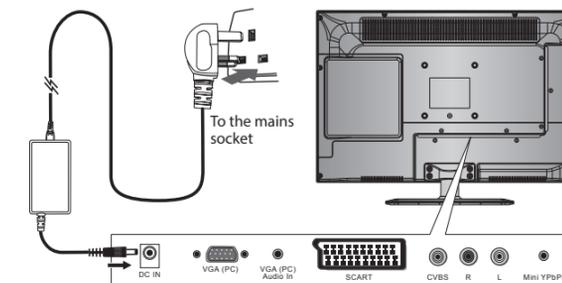


6 Turning On and Tuning In the TV

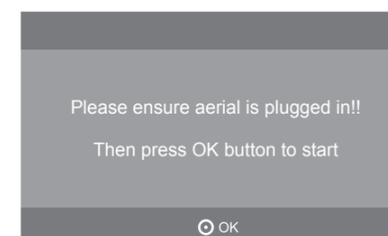


1. The first time you turn the TV on, it will go straight into the **First Time Installation** menu.


Please ensure the aerial is plugged in and then press the **OK** button.

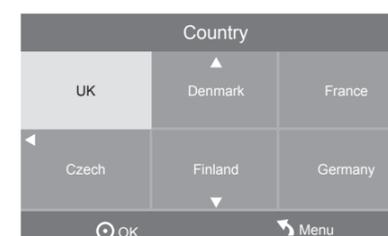

3. To select the country option press the **▲▶▶▶** buttons. Press the **OK** button to confirm.

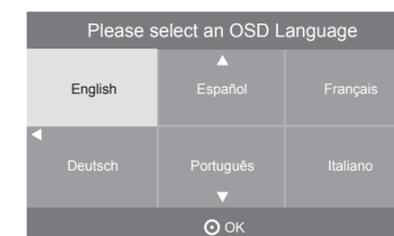

2. Press the **▲▶▶▶** buttons to select your desired language to be displayed on the menu. The default on-screen menu language is set as English. Press the **OK** button to confirm.

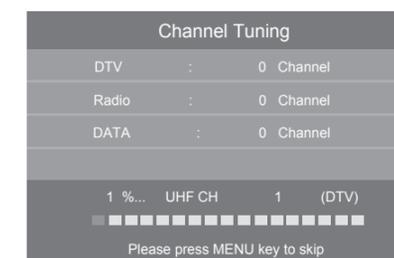


4. Channel tuning will commence. This operation may take up to 10 minutes. The display will show the progress of the tuning and the number of channels found.

Target Region Setting

During tuning your TV may have received signals from more than one transmitter. If this has occurred the Target Region Setting screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require.

1. Press the **OK** button to confirm the **Country Code**, this will highlight the Primary Region **England**.
2. Press the **OK** button to highlight **Secondary Region** and press the **▶◀** buttons to select your preferred option (if available).
3. Press the **OK** button to confirm, and **Tertiary Region** will be highlighted. Press the **▶◀** buttons to select your preferred option (if available).
4. Press the **OK** button to confirm. The main menu will be briefly displayed.

Your TV is now fully tuned in.

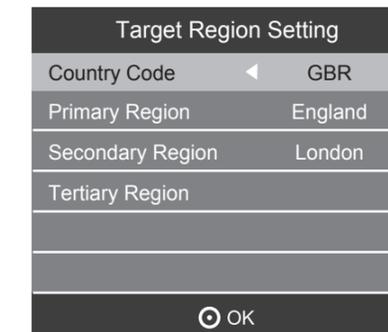

QSG-L24FEDN13_P13/R13/W13-130617V1