


KENWOOD

Microwave



K25MSS10

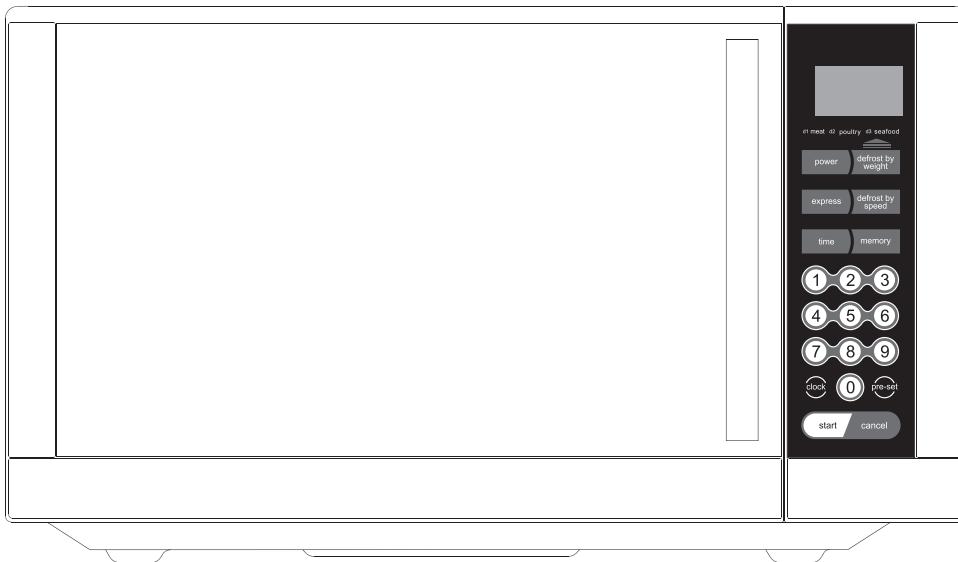

**DSG Retail Limited is responsible for after sales service.
If you have a query about the product please contact our product support line
0844 561 6263 (Currys) and 08700 118 117 (Pixmania).**

table of contents

| | |
|---|----------------|
| table of contents | 2 - 3 |
| know your Kenwood microwave | 4 |
| safety information | 4 - 8 |
| using aluminium foil in your microwave | 9 |
| unpacking and getting ready | 10 |
| introducing microwave cooking | 11 - 16 |
| cooking with a microwave | 11 - 12 |
| microwave heating categories | 13 |
| <hr/> | |
| microwave cooking | 19 |
| two-stage cooking | 20 |
| delay start cooking (program set in advance) | 21- 22 |
| quick start cooking | 23 |
| defrosting | 24 |
| defrost by weight | 24 |
| defrost by time | 24 |
| querying cooking function | 25 |
| to find out the cooking power | 25 |
| to find out the time | 25 |
| to find out the pre-set time | 25 |
| <hr/> | |
| cleaning your microwave | 26 - 27 |
| troubleshooting | 28 - 29 |
| questions and answers | 28 - 29 |
| specification | 30 |

| | |
|-------------------------------|-----------|
| steam | 14 |
| condensation | 14 |
| product overview | 14 - 15 |
| control panel overview | 15 |
| checking your microwave | 16 |
| clock setting | 17 |
| setting the child lock | 18 |

before use

operating instructions

**care, maintenance and
troubleshooting**

know your Kenwood microwave

before using your Kenwood microwave

- Read these instructions carefully and retain for future reference.
- Remove all packaging labels and dispose of them properly.

before calling for service

- Review this section on Troubleshooting. This will help you to solve general problems yourself.

safety information

general safety

- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Keep your fingers away from moving parts and fitted attachments.
- Never use a damaged machine.
- Never operate the machine when it is empty.
- Keep mains cable out of reach from children.
- Keep power unit, mains cable and plug away from water.
- Never exceed the maximum capacities.
- When using an attachment, read the safety instructions.
- Take care when lifting this appliance as it is heavy.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended domestic use. The company responsible for this product, DSG Retail Limited, will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

safety information

please read carefully and keep for future reference

maintenance of your microwave

WARNING  : *It is hazardous for anyone other than a qualified technician to carry out any service or repair operation which involves the removal of a cover that gives protection against exposure to microwave energy.*

WARNING  : If the door or door seals are damaged, the oven must not be operated until it has been repaired by a qualified technician.

- If smoke is observed, switch off and unplug the appliance and keep the door closed in order to contain the flames.
- If the mains cable is damaged, it must be replaced by a service agent or similar qualified technician.
- If you have a pacemaker, please contact your doctor before using a microwave oven.

microwave use

- This microwave is not intended for commercial use.
- It should never be used for drying clothes or other non-food purposes.
- The microwave should not be left unattended when in use.
- The temperature of accessible surfaces may be high when the appliance is operating.
- To prevent high moisture content gathering inside the oven cavity, open the door immediately after the cooking function has stopped to allow steam to escape.
- Only use utensils that are suitable for microwave use.
- Care should be taken so metal objects are not used in the microwave.
 - These include :
 - “ Metal cooking utensils
 - “ Metal plates or trays
 - “ Wire twist ties
 - “ Crockery with metal trims
 - “ Meat thermometer
- Care should be taken when using paper, plastic, wooden or other combustible materials in the oven as they can catch fire.
- Oil & fat for deep frying should not be heated in the microwave.
- Only use cling film designed for microwave use & take extra care when removing the film to avoid steam burns.
- Only heat popcorn that has been designed for microwave use.

before use

safety information

cooking use

As the power of different microwave ovens can vary considerably, care must be taken when first using this appliance as it may cook faster than expected.

- Do not leave the appliance unattended during use.

WARNING  : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use; DO NOT assume that because a child has mastered one cooking skill he/she can cook everything without close supervision. The microwave MUST NOT be treated nor used like a toy.

- Take care when cooking food with a high sugar or fat content, such as Christmas pudding or fruitcake. The sugar or fat can overheat and in some cases catch fire.

fire!

In the event of fire:

- Keep the oven door closed.
- Turn off the power.
- Unplug the appliance from the mains power.

first aid

Treat scalding by:

- Quickly placing the scald under cold running water for at least 10 minutes.
- Cover with a clean dry dressing. Do not use creams, oils or lotions.

cleaning your microwave

The microwave should be cleaned regularly and food deposits removed. Failure to maintain the oven in a clean condition can affect the life of the appliance and possibly result in a hazardous situation. (See cleaning your microwave)

safety information

do not use these in your microwave

- Never use equipment made of metal, except foil in your microwave. The microwave energy cannot pass through the metal so it bounces off and sparks against the inside of the oven.
- Stop the microwave straight away if any equipment does cause sparks.
- Remember that some crockery has a metal trim around the edge. Even this trim can cause sparks.

Containers / Certain Foods

WARNING  : Pressure will build up in sealed containers and cause them to explode. Therefore, do not use the following in your microwave:

- Sealed containers
 - Capped bottles
 - Vacuum containers
 - Sealed jars
 - Hard-boiled eggs
 - Eggs in their shells
 - Nuts
- Always pierce the skin of fruit and vegetables, such as potatoes.
 - Never use scratched, cracked or damaged glass in a microwave. Damaged glass can explode.

delayed boiling

Liquids heated in a microwave can boil up when removing them from the microwave.

Take the following precautions :

- Always stir liquids before and after cooking.
- Allow them to stand.
- Use containers that are wider at the top than the bottom.

preparing food for babies

Extra care must be taken when preparing food or drink for babies and small children.

- Always test the food or liquid temperature before giving it to a baby.
- When using a baby bottle, ensure the teat is removed before heating.
- When warming milk, ensure the bottle is shaken.

caution!

During cooking, the outer surface will become hot, do not touch the outer casing of the microwave. Care should be taken not to store any items on top of your microwave.

safety information



earthing instructions

- **WARNING: THIS APPLIANCE MUST BE EARTHED.**
- **This appliance is equipped with a mains cable having an equipment-earthing conductor and an earthing plug.**
- The plug must be plugged into an appropriate mains socket that is installed and earthed in accordance with all local standards and requirements.

warning!

- Improper connection of the equipment-earthing conductor can result in a risk of electric shock.
- The wires in the cord are coloured as follows:
Green and Yellow = Earth,
Blue = Neutral,
Brown = Live.
- Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly earthed.
- Never modify the plug provided with the appliance.
- If the plug does not fit properly in the outlet, have a qualified electrician install the correct one.

using aluminium foil in your microwave

It is safe to use aluminium foil in your microwave as long as you follow these safety guidelines.

As with all metal, microwave energy cannot pass through foil, but provided that you keep the foil away from the side of the oven it will not cause sparks and there will not be any damage to your oven.

Using foil is a good way of shielding parts of food that you do not want to cook as quickly as others – perhaps where the food is thinner and would otherwise overcook.

Place the foil over the area you want to shield, taking care that the foil will not touch the sides of the oven when the turntable rotates. Only use one piece of foil at a time so that you do not get sparks between the separate pieces.

Follow these guidelines when using foil in your microwave:


- Remove foil lids from containers before using in the microwave. Some lids are made of card with a foil covering – these should be removed too. Use a microwave safe transparent lid if possible.
- Stir food during cooking if the container has a lid or film cover.
- Always use the glass turntable.
- Use shallow containers with a large surface area. Do not use containers that are more than 1.25in (3.5cm) deep.
- Use oven gloves when handling hot foil containers.
- Do not completely cover food with foil. The microwave energy cannot pass through the foil so the food will not cook.
- Do not let aluminium foil touch the inside of the oven.
- Do not use more than one piece of foil in the oven at the same time.

unpacking and getting ready

This microwave is designed for home use. It should not be used for commercial catering.


1. After unpacking your microwave, check that it has not been damaged whilst in the box. Make sure there are no dents on the oven, and the door closes properly. A dented or damaged oven could allow microwave energy to escape. Make sure that you have taken all the packaging from inside the microwave. Please dispose of the plastic wrappings or bags safely and keep out of the reach of babies and young children.

2. Choose a flat work surface for your microwave away from heat sources such as radiators or fires and away from cold areas. You should allow a 10cm space all around the oven and 30cm above so that warm air can escape from the vents during cooking – This microwave is not designed to be built in. ①

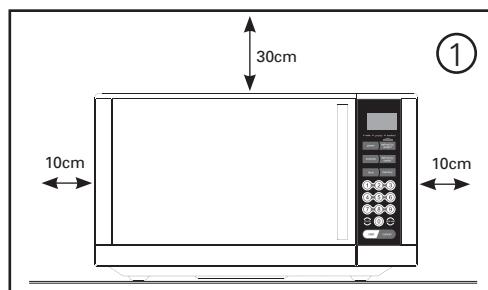

3. Plug your microwave into a standard household electrical socket (230-240 volt, 13 amp rated). Avoid using a socket that also has an adaptor and other equipment plugged in. Do not use a multi-adaptor.

4. Put the turntable ring inside the microwave and place the glass turntable on top of the ring. ②
The turntable is shaped to sit securely on the spindle. You must always use the turntable and ring whenever you use the microwave.

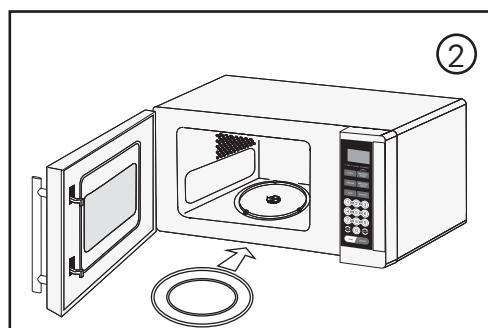

introducing microwave cooking

Always remember the basic safeguards you would follow when using any cooking equipment or handling hot food.

See below for basic guidelines in microwave cooking.


If you are unfamiliar with using a microwave, refer to the back of this instruction booklet for more information.

cooking with a microwave

- Cooking with a microwave is much faster than conventional cooking and, whilst you should make sure that food is fully cooked, you should be careful not to overcook it.
- Microwave energy can heat unevenly so stirring to distribute heat is very important. Always stir from the outside, inwards.
- If you are cooking a number of individual foods at the same time, such as baked potatoes or small cakes, arrange them evenly on the turntable so that they cook evenly. Never stack food in your microwave.
- Turn larger foods such as meat roasts and poultry during cooking so that the top and bottom cook evenly. It is also recommended to turn pieces of meat or poultry, especially if they contain a bone.
- Meat and poultry which is cooked for 15 minutes or more will brown lightly in its own fat. Anything cooked for a shorter time can be brushed with a browning sauce to give an appetising colour.
- Strips of aluminium foil can be used to cover the thinner pieces of food to stop them overcooking before the thicker parts of the food have had a chance to cook. Use the foil sparingly and wrap around the food or container carefully to stop it touching the inside of the oven which could cause sparks.

NOTE: You should always have your microwave checked by a qualified technician if it has been dropped or damaged to ensure it is safe to use.

- Microwave ovens cook food using microwave energy that is similar to naturally occurring radio waves. Normally, these “waves” would fade as they dispersed into the atmosphere but in a microwave oven they are concentrated onto the food causing it to heat up.
- Microwave energy cannot pass through metal – so it cannot escape from inside your microwave oven – but it can pass through materials like glass, porcelain, plastic and paper. These materials are used in the manufacture of microwave safe cooking equipment.
- Microwave safe cooking equipment will still get hot as the food it contains heats up.

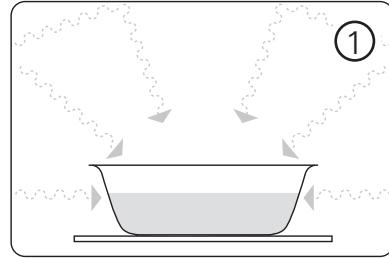

The microwave energy focuses on the moisture in the food causing lots of tiny vibrations. The vibrations get so great that the moisture, and the food heats up. (Fig 1)

checking your cooking utensils

Most heat-resistant, non-metallic cooking utensils are safe to use in your microwave. If you are not sure if you can use a utensil in your microwave, follow this simple test:

1. Put the utensil into the microwave next to a cup of water – use a cup that you know is microwave safe. Close the door.
2. Turn the microwave on for 30 seconds only.
3. After 30 seconds, carefully check to see if the water has warmed up.
If the water has not warmed up but the utensil has, the utensil is not microwave-safe and should not be used in the microwave.
4. Do not use your hands to touch the utensils as it may already be hot.

microwave heating categories

Your microwave oven has been tested and labelled to meet the government's voluntary agreement on the reheating of pre-cooked food.

The heating characteristics and output power levels of microwave ovens are usually calculated using a relatively large portion of food (a 1000 gram load, IEC 705) but many packs of pre-cooked food are sold in smaller packs, often about 350 grams.

The government, in partnership with food companies and microwave manufacturers, have set up a system of heating categories to help you choose the reheating time for pre-cooked food.



850W is the output power of the microwave oven.

E is the heating category for your microwave oven. Check the cooking times for category E on the food's packaging to see how long it should be cooked for. Please see below example for reference.

To microwave:
 Remove outer packaging.
 Pierce film lid SEVERAL TIMES.
 Place on a microwaveable plate.
 Heat on full power.
 Stir or turn halfway through heating.

To microwave from frozen:
 Remove outer packaging.
 Pierce film lid SEVERAL TIMES.
 Place on a microwaveable plate.
 Heat on full power.
 Stir or turn halfway through heating.


| | Heating Category | | Wattage (IEC 705) | |
|----------------------------|------------------|-----|-------------------|------|
| | B | D | 650W | 750W |
| | B | D | 650W | 750W |
| Full power (in minutes) | 2 | 2 | 2 | 2 |
| Stir / Turn | Stir / Turn | | Stir / Turn | |
| Full power (in minutes) | 2 | 1.5 | 2 | 1.5 |
| Standing time (in minutes) | 1 | 1 | 1 | 1 |

| | Heating Category | | Wattage (IEC 705) | |
|----------------------------|------------------|-----|-------------------|------|
| | B | D | 650W | 750W |
| | B | D | 650W | 750W |
| Full power (in minutes) | 3 | 2.5 | 3 | 2.5 |
| Stir / Turn | Stir / Turn | | Stir / Turn | |
| Full power (in minutes) | 4 | 3.5 | 4 | 3.5 |
| Standing time (in minutes) | 1 | 1 | 1 | 1 |

steam

When you microwave food, steam is created as water in the food heats up and evaporates.

The steam formed during microwave cooking is entirely safe. It has to escape from the microwave to prevent pressure from building up inside the oven. It does this through the vents on the back of the microwave and from around the door.

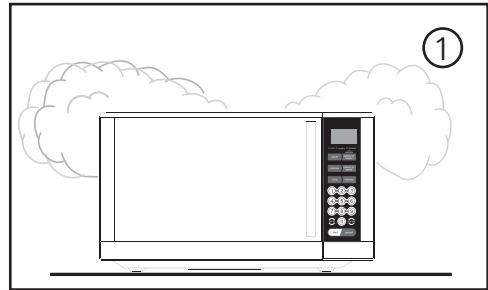

condensation


As the steam cools, you may find the condensation gathers in small pools inside your microwave and on the work surface beneath the door and vents.

Always dry the microwave after cooking foods with a high moisture content.


Your microwave is designed to let steam escape from the vents and around the door without microwave energy escaping. (Fig 1)

There is no danger of microwave energy escaping with the steam.

product overview

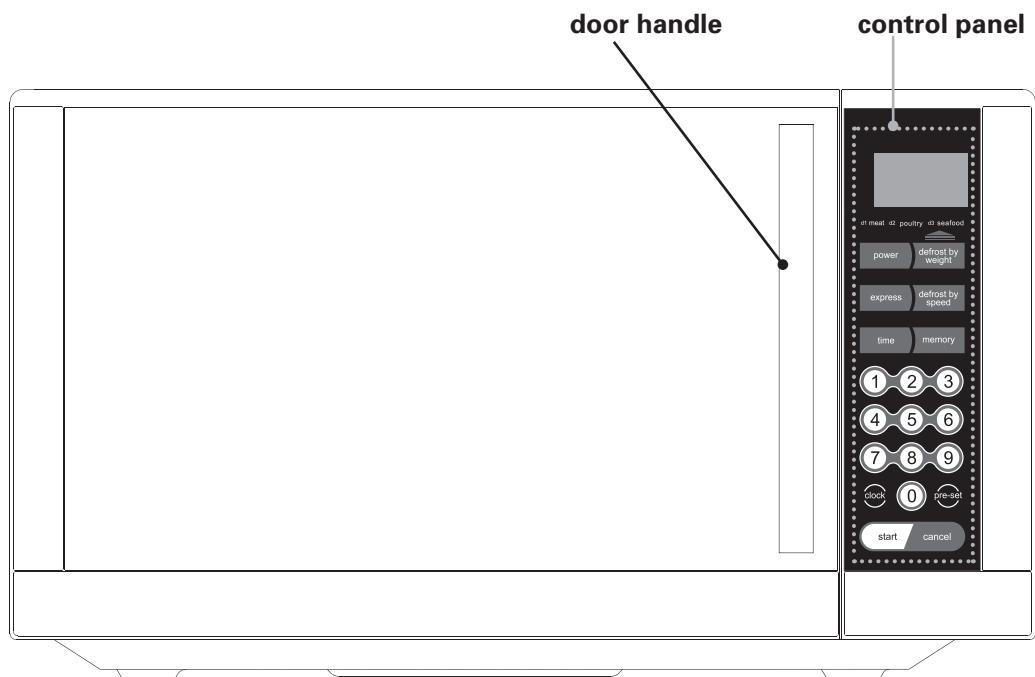


control panel overview

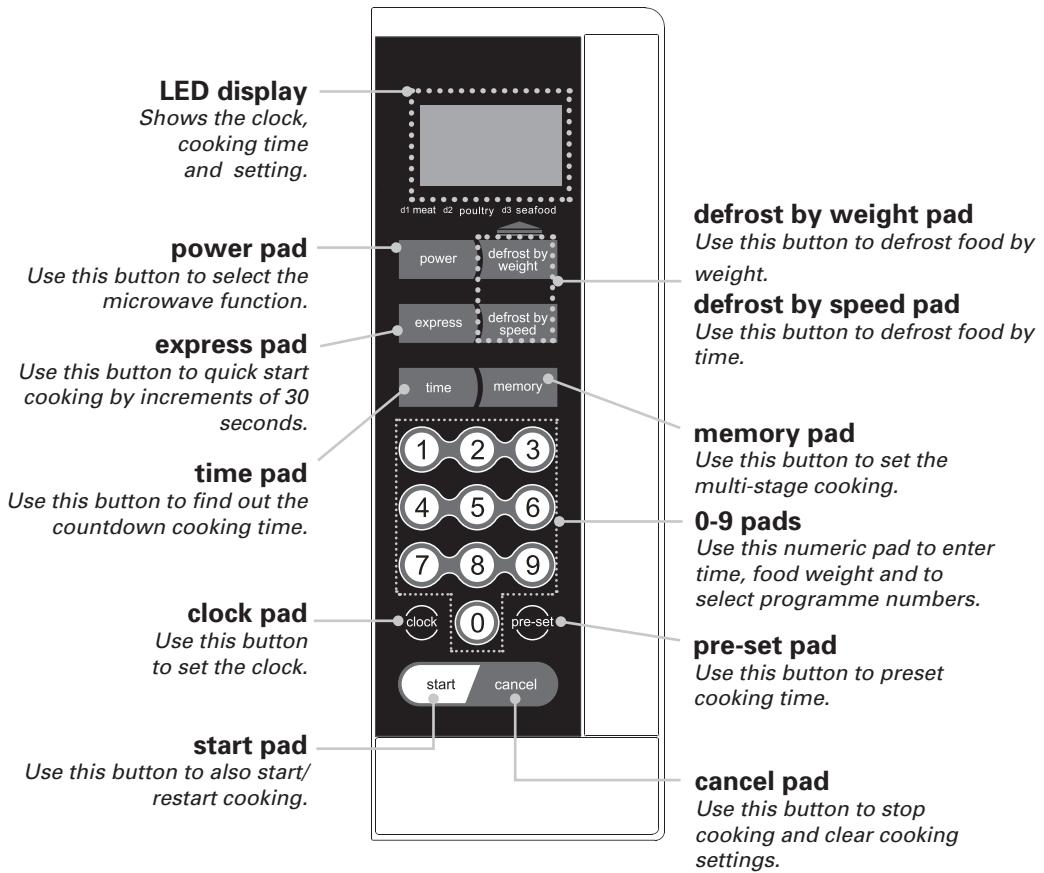

before use

Accessories

part numbers **XGALK25CSSP12**
and **XGALK25CSSP11**

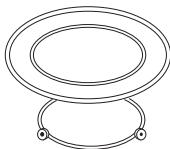

Glass Turntable x 1
Turntable Ring x 1

part number **XGALK25MSSB04-V2**





Instruction Manual
x 1

checking your microwave

Check your microwave after unpacking.

NOTE: For your safety, the microwave stops if the oven door is opened during cooking. Close the door and press the **start** pad to continue the cooking cycle.

1. Pull the handle to open the oven door. Put the turntable ring inside the oven and place the glass turntable on top of the ring. The turntable is shaped to sit securely on the spindle. (Fig 1)
You must always use the glass turntable and turntable ring whenever you use the microwave.
Place a cup of water on the glass turntable. Make sure the cup is microwave-safe - it should not have any decorative metal trim.
2. Close the oven door.
3. Press the **cancel** pad to clear any settings that have already been made. (Fig 2)
4. Press the **express** pad once and then press the **start** pad to start a simple 15-second microwave cooking cycle and that allows you to check the operation of the microwave.
5. When the cooking cycle has finished, the water should be hot (be careful when you take the cup out of the microwave). Press the **cancel** pad to clear any settings.

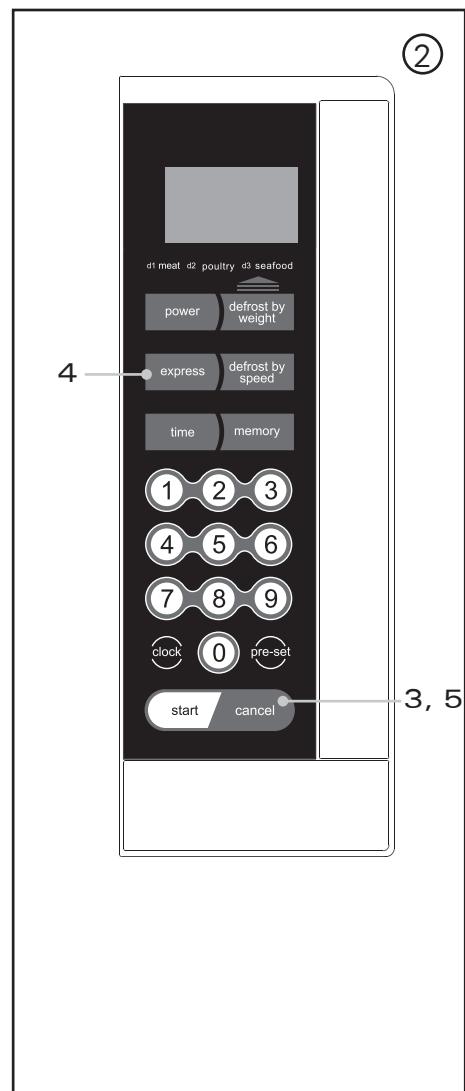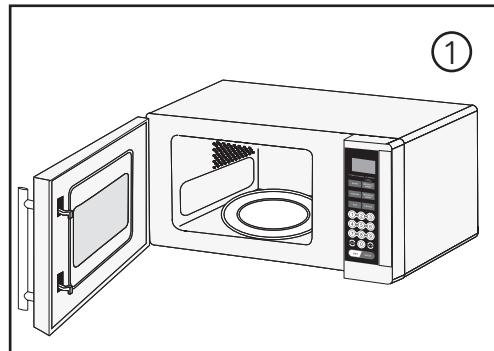


clock setting

When the microwave is connected to the mains power, the LED display will show **1:01**, and it will sound once. Please ensure you have set the clock prior to use.

Please follow the steps below to set the clock.

1. Press the **clock** pad and then the **cancel** pad. The time will display : **0**.
2. Press the **0-9** numeric pads to enter the correct time. For example, to enter the time 1:30 in the afternoon, you need to press **1-3-0**.
3. Press the **clock** pad again to complete the clock setting.
4. **:** will start flashing and the time will illuminate.

NOTE: This is a 12-hour clock. When the microwave is connected to the mains the first time or when the power is resumed after a power interruption, the LED display will show **ENTER CLOCK TIME**. To re-set the clock, simply follow the above Step 1-3.

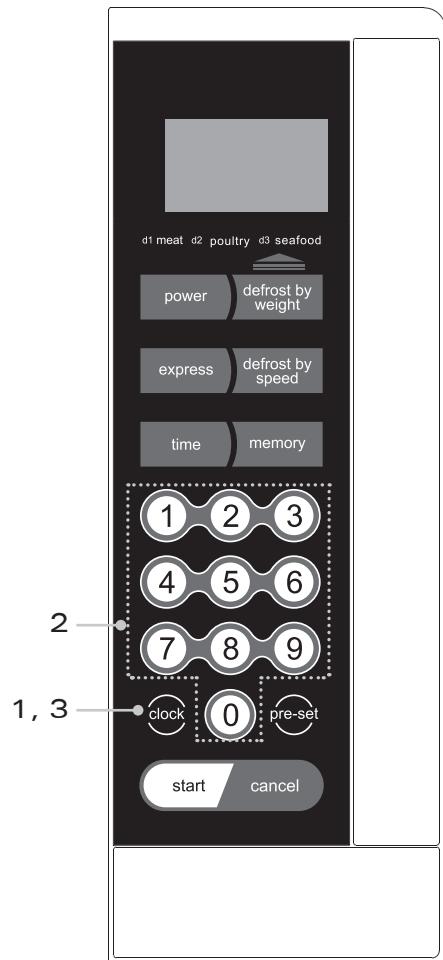


before use

setting the child lock

This feature prevents the electronic operation of the microwave by locking the operation of the control panel until you have cancelled it.

Please follow the steps below to set the child lock.

1. Press the **cancel** pad for 3 seconds and the microwave will sound to indicate the microwave has set the child lock.
2. To release the child lock, press the **cancel** pad again for 3 seconds and the microwave will sound to indicate that the microwave has released the child lock.

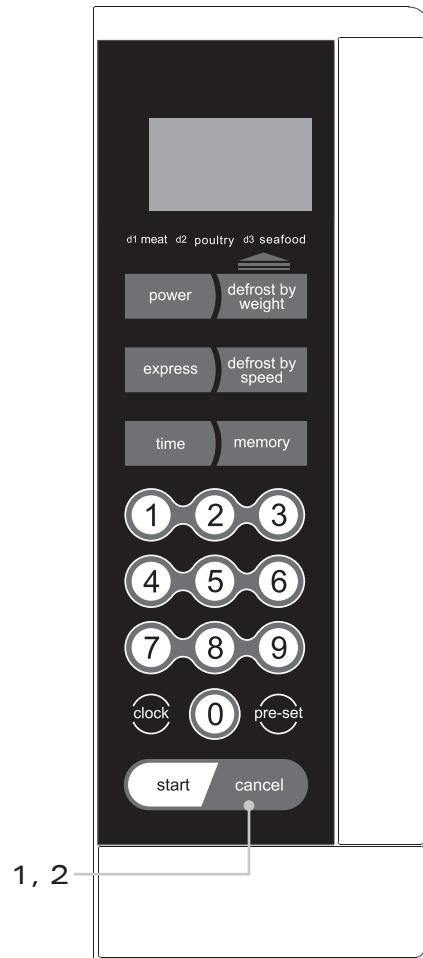


microwave cooking

For simple **Microwave Cooking**, follow the steps below.

For instance: If you want to use 80% microwave power to cook for 20 minutes.

1. Press the **time** pad and then press the **numeric pads (0-9)** to enter the cooking time (**2-0-0-0**) until the LED display shows **20:00**.
2. Press the **power** pad once and the LED display will show **P10**. Press **numeric pad (8)** to change the microwave power level to **P8**.
3. Press the **start** pad to confirm and start cooking.
4. Press the **cancel** pad once to stop cooking and again to cancel the setting.

| Power + Numeric Pads Control | | |
|------------------------------|-------------|-----------------|
| Numeric Pads | LED Display | Microwave Power |
| 1-0 | P10 | 100% |
| 9 | P9 | 90% |
| 8 | P8 | 80% |
| 7 | P7 | 70% |
| 6 | P6 | 60% |
| 5 | P5 | 50% |
| 4 | P4 | 40% |
| 3 | P3 | 30% |
| 2 | P2 | 20% |
| 1 | P1 | 10% |

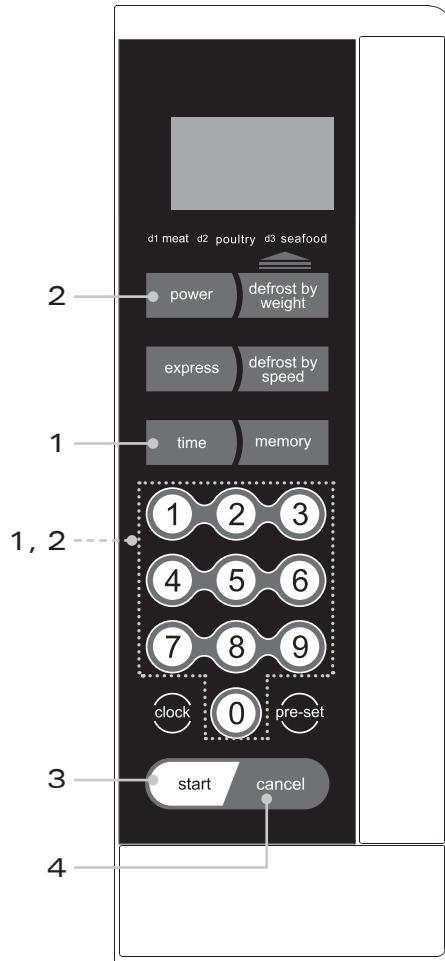

NOTE: Press the **time** pad at any time to pause cooking. Press **start** pad to resume.

two-stage cooking


For **Two-Stage Cooking**, please follow the steps below.

For instance: If you want to defrost your food for 5 minutes and then to cook it with 80% microwave power for 7 minutes.

1. Press the **defrost by speed** pad once, and then press the **numeric pads (0-9)** to enter the time **(5-0-0)** for first stage cooking. The LED display shows **5:00**.

ATTENTION: Do not press the **start** pad at this point.

2. Press the **memory** pad once and the LED display will show **1S**.
3. Press the **time** pad and then press the **numeric pads (0-9)** to enter the time **(7-0-0)** for second stage cooking. The LED display shows **7:00**.
4. Press the **power** pad once and the LED display will show **P10**. Press **numeric pad (8)** to change the microwave power level to **P8**.
5. Press the **start** pad to confirm and start cooking. The microwave will sound once to indicate it has started the first stage cooking count down. The microwave will sound again as it starts the microwave cooking (the second stage). Once completed, the microwave oven will sound five times to indicate the completion.
6. Press the **cancel** pad once to cancel the setting.

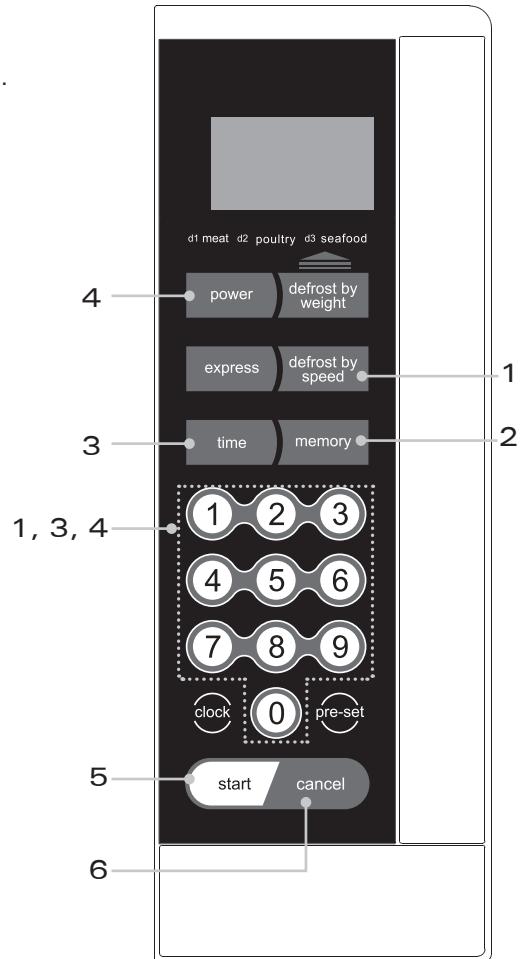


delay start cooking (program set in advance)

For **Delay Start Cooking**, follow the steps below. The maximum time range is 12 hours.
For instance: The current time is 12 o'clock (noon) and you want to cook with 80% microwave power for 5 minutes in 1 hour and 30 minutes time.

NOTE: You can only set 2 stages for Delay Start Cooking. Defrosting programmes cannot be set in Delay Start Cooking. Ensure the oven door is closed prior to setting the program.

- Press the **pre-set** pad to preset the starting time for the cooking. The LED display will show : **0**.
 - Press the **numeric pads (1-3-0)** to adjust the starting time until the LED display shows **1:30**.
- Press **power** pad once and the LED display will show **P10**. Press the **numeric pad (8)** to change the microwave power level to 80%.
- Press the **time** pad once, and then press the **numeric pads (5-0-0)** to enter the cooking time. The LED display will show **5:00**.
- Press the **start** pad to complete the setting.
⏰ will start flashing and the time will illuminate. The microwave will sound when the count down reaches the starting time and cooking will start automatically.

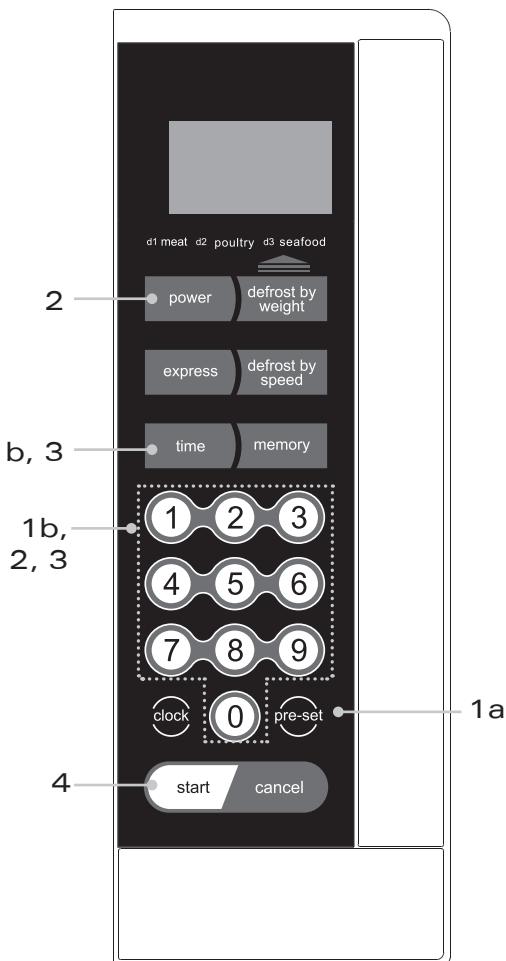


NOTE: To use this feature during Two-Stage Cooking, please follow the steps below.

For example, if you want to defrost your food for 5 minutes and then to cook it with 80% microwave power for 7 minutes in 1 hour and 30 minutes time.

1. a Press the **pre-set** pad to preset the starting time for the cooking. The LED display will show : **0**.
 b Press the **numeric pads (1-3-0)** to adjust the starting time until the LED display shows **1:30**.
2. Press the **defrost by speed** pad once, and then press the **numeric pads (5-0-0)** to enter the time for first stage cooking. The LED display shows **5:00**.

ATTENTION: Do not press the **start** pad at this point.


3. Press the **memory** pad once and the LED display will show **S1**.
4. Press the **time** pad once, and then press the **numeric pads (7-0-0)** to enter the time for second stage cooking. The LED display shows **7:00**.
5. Press the **power** pad once and the LED display will show **P10**. Press **numeric pad (8)** to change the microwave power level **P8**.
6. Press the **start** pad to complete the setting. ⏻ will start flashing and the time will illuminate. The microwave will sound when the count down reaches the starting time and cooking will start automatically.

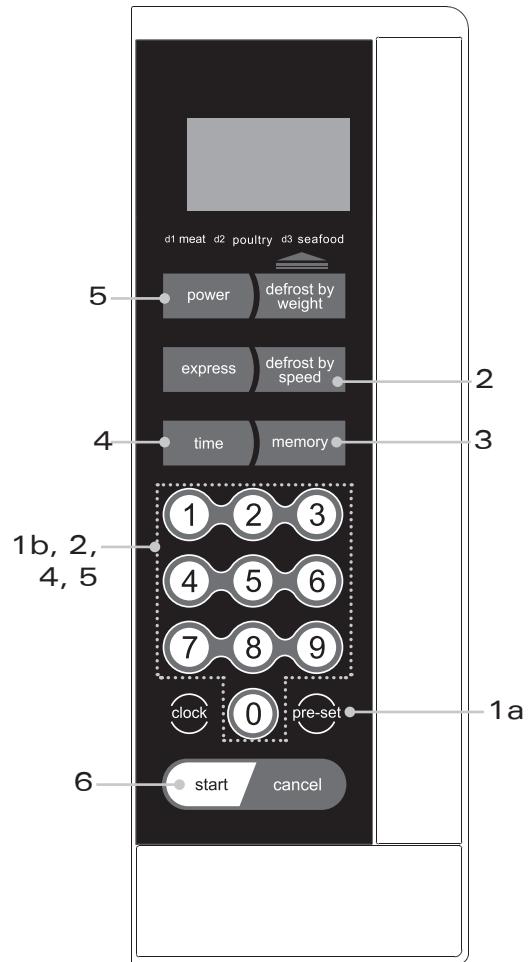

quick start cooking

This feature allows you to quickly cook your food for 30 seconds with 100% microwave power. Please follow the steps below.

1. Press the **express** pad and then press the **start** pad to start the 15-second quick start cooking. For 30-second quick start cooking, press the **express** pad twice and then press the **start** pad. You may increase the cooking time up to 2 minutes.
2. Alternatively, you can press the **time** pad and then the **numeric pads (0-9)** to set the cooking time with 100% microwave power first. Then, press the **start** pad to start cooking.

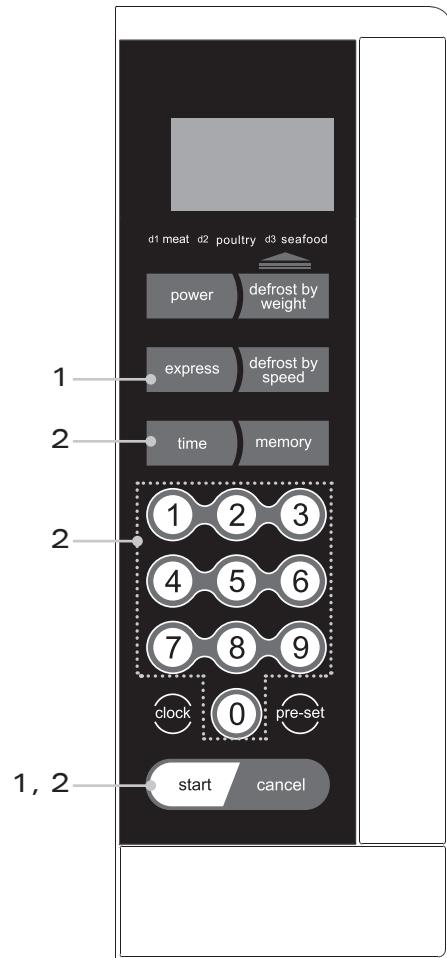

defrosting

This feature allows you to defrost your frozen foods simply by entering the weight or time. You may wish to place the frozen food on a microwave safe plate or dish before placing it on the defrost rack (**not supplied in this microwave package**). This is to ensure that any liquids released during defrosting will not spill and dirty the interior of the oven.

defrost by weight

1. Press the **defrost by weight** pad to select the defrosting programmes and the LED display will show **★** **d1**, **d2** and **d3**.
2. Press the **numeric pads (0-9)** to enter the weight of your food. Please refer to the Defrosting Programme table for information.

| Defrosting Programme table | | |
|----------------------------|----------------|---------|
| Food Category | Maximum Weight | Display |
| Meat | 2300g | d1 |
| Poultry | 4000g | d2 |
| Seafood | 900g | d3 |

3. Press the **start** pad to start defrosting.

TIPS: Large items may be frozen in the centre. Therefore, to ensure even thawing, turn them over from time to time and break them into smaller pieces during defrosting.


Place roasts fat-side down or whole poultry breast-side down.

Drain liquids during defrosting as the juices from food can get hot and cook the food.

4. Press the **cancel** pad once to cancel the defrosting.

defrost by time

1. Press the **defrost by speed** pad twice and the LED display will show **★★** and **: 0**.
2. Press the **numeric pads (0-9)** to set the defrosting time.
3. Press the **start** pad to start defrosting.
4. Press the **cancel** pad to cancel the setting.

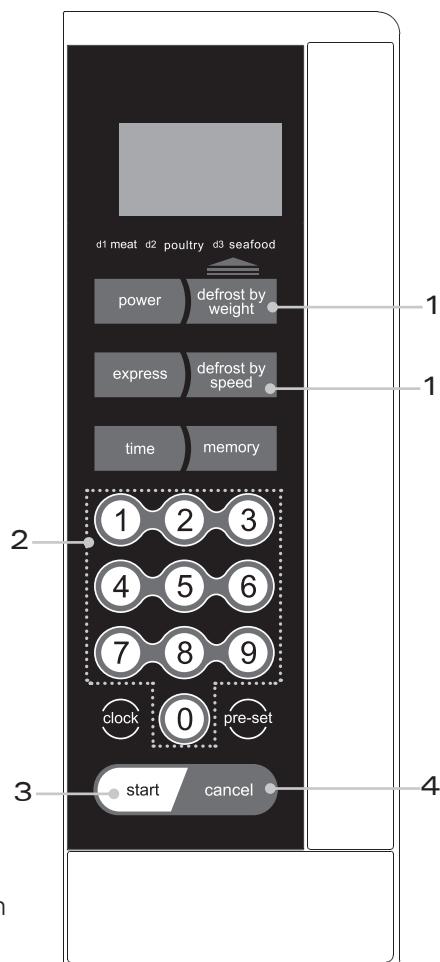

querying the cooking function

This feature allows you to check and view the current power, time and pre-set time of your selected cooking program.

to find out the current cooking power


1. Press the **power** pad once and the LED display will show the current cooking power while the oven is in microwave cooking. It will last for 3 seconds and then return to its original display.

to find out the time

2. Press the **clock** pad once and the LED display will show the time while the oven is microwave cooking. It will last for 3 seconds and then return to its original display.

to find out the pre-set time

3. While the oven is still in the pre-set state, press the **preset** button once and the LED display will show the pre-set time. It will last for 3 seconds and then return to its original display.

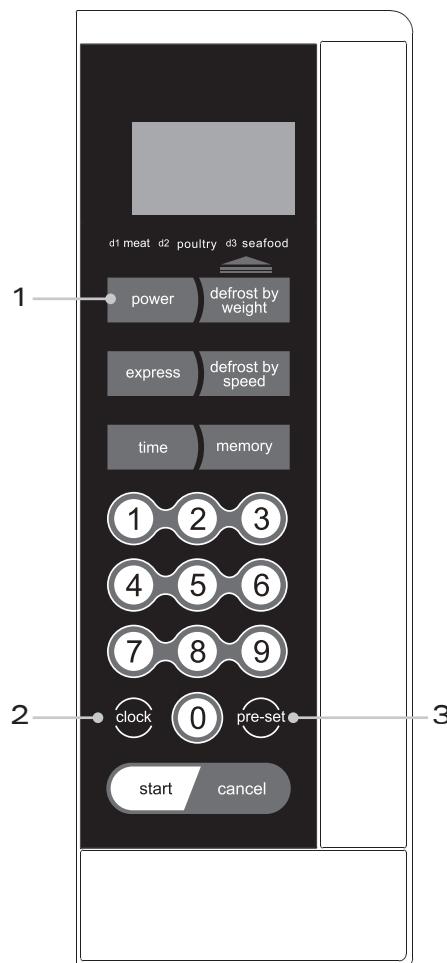


cleaning your

*Cleaning your microwave after each time you use it will help to prevent
Unplug your microwave from the mains and wait for it
On the right hand side wall of the cavity is the wave guide cover,
It is important that this wave guide cover is kept clean at all times.*


Make sure you keep the outlet grids clean.

The oven walls have a special enamel coating which makes cleaning very easy. Use a soft damp cloth to wipe off any splashes or a paper towel to mop up any spills. Wipe off grease with a damp cloth and a little detergent. Dry thoroughly. As with any oven, if grease is left to accumulate, it can smoke and even catch fire.

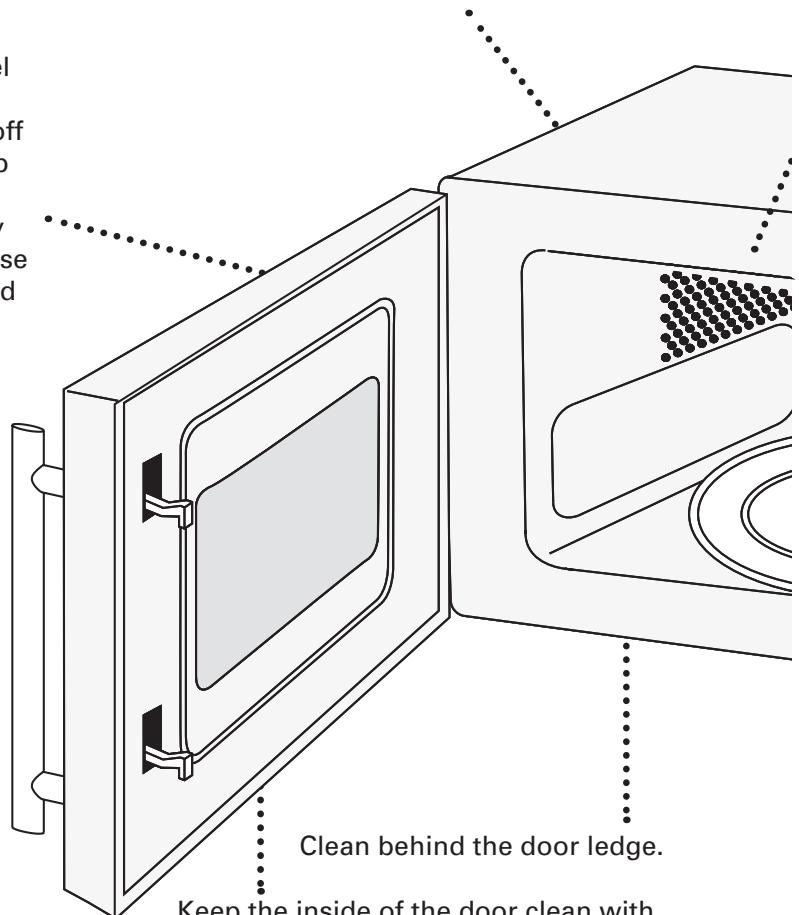

Clean behind the door ledge.

Keep the inside of the door clean with a damp cloth. Use warm soapy water for stubborn marks and dry thoroughly. The inside of the door has a special coating and must not be cleaned with abrasive pads or cleaning powders.

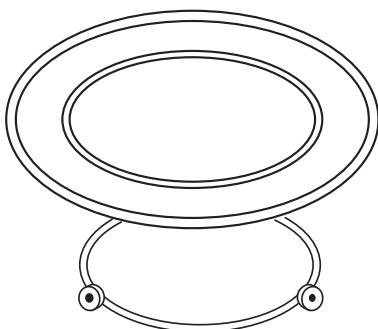

Treat the glass turntable as you would any glass plate. After you have used it for more than 15 minutes, allow it to cool down before you use it again. Do not wash the turntable in very hot water, this could crack it.


Make sure the turntable is dry before you put it back in the oven.

microwave

*a build up of stubborn marks that can be difficult to clean.
to cool down completely before cleaning.
microwaves are passed through this to enable your food to cook.
Wipe it with mild detergent and water and leave to dry.*

Be careful not to spill water into the vents.

Keep the front of the oven clean so that the door can close properly.

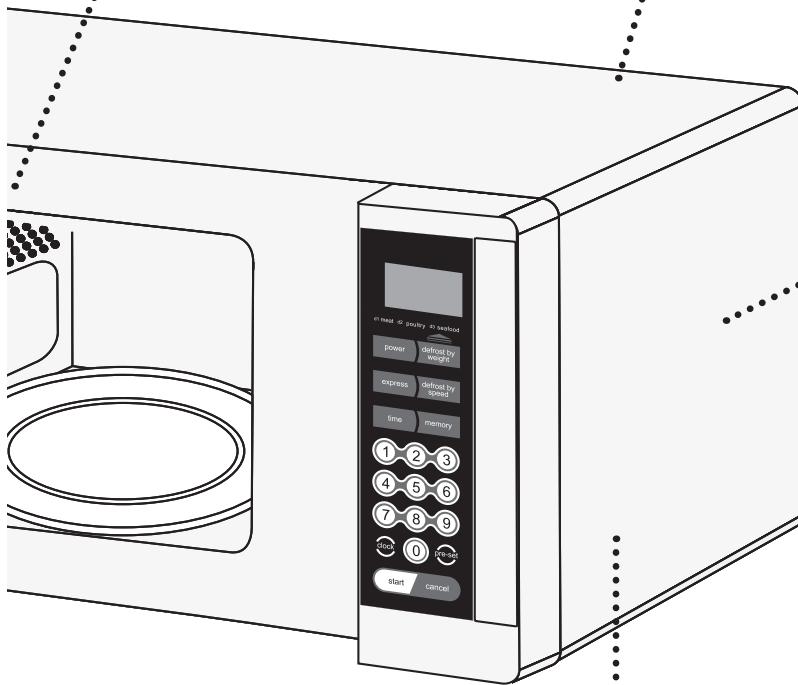

Do not remove wave guide cover: It is important to keep the cover clean in the same manner as the inside of the oven. If grease is left to accumulate, it can smoke and even catch fire.

Unplug the oven before cleaning the power lead and the oven. Wipe with a damp cloth and leave to dry before plugging it back in.

Use warm soapy water to clean the outside of the oven. Do not use abrasive pads or powders that could scratch the surface.

NOTE: Do not remove any fixed parts from the inside of your microwave oven during cleaning or at any other time.

troubleshooting

If a problem does occur, it may be due to something very minor. The following Q & A may be able to resolve the problem.

questions and answers

Q. Why doesn't the food seem to cook?

A. Check that:

- the cooking time has been set
- the door is closed
- the mains socket is not overloaded causing the fuse to blow.

Q. Why does the food seem undercooked or overcooked?

A. Check that:

- the correct cooking time has been set
- the correct power setting has been used.

Q. How can I stop eggs from popping?

A. When you cook or poach eggs in the microwave, the yolk can sometimes pop as steam builds up inside it. You can stop the egg from popping by piercing the yolk with a toothpick before cooking. Never cook eggs that are still in their shells.

Q. Why is it so important that I allow standing time after cooking?

A. With microwave cooking, many foods build up enough heat inside them to continue cooking even after they have been taken out of the oven. Microwave cooking works from the outside of food inwards, standing time lets you cook the centre of the food just right without the outside being overcooked.

Q. Why does my oven sometimes take longer to cook than it says in the recipe?

A. First check that the oven was set just as the recipe said.

Cooking times and heat settings are suggestions to help prevent overcooking but differences in the weight, size, shape and starting temperature of food will all affect how long it takes to cook – just as it does with a conventional oven. Use your judgement along with the recipe to check whether the food has been cooked properly.

Q. Why do I get condensation on the inside of the oven door?

A. Condensation is perfectly normal, especially when you are cooking food with a high moisture content such as potatoes.

Q. Does the microwave energy get through the window on the door?

A. No. The door has a special metal screen with holes in that lets you see inside but stops microwave energy from getting out.

Q. Steam comes out of the side of the door and vents. Can microwave energy get out too?

A. No. The door and vents are carefully designed to let steam out during cooking but keep microwave energy in. The gaps are not big enough for microwave energy to escape.

questions and answers

Q. What happens if the microwave is switched on while the oven is empty?

A. The microwave will be damaged. Do not switch the microwave on when there is nothing inside the oven. It is a good idea to keep a cup of water in the oven just in case someone accidentally starts the microwave.

Q. Why doesn't the oven light illuminate?

A. Open the door. If the light does not illuminate, the bulb has probably blown. Call a qualified technician – do not try to change the bulb yourself.

Q. There are sparks inside the oven when I use the microwave. Will this cause any damage?

A. Yes. Make sure that you are not using any metal utensils and that your containers don't have a metal trim. You must not use metal in your microwave, except foil, when you cook.

Q. Light is showing through the vents and door. Does this mean the microwave energy can escape?

A. No. It is normal for the light to be visible and is nothing to be concerned about.

Q. Why do I get interference on my TV and radio when I use the microwave?

A. Microwave ovens use radio waves similar to those received by TVs and radios. You can lessen the interference by moving your microwave further away from the TV or radio.

specification

| | |
|----------------------------|--|
| Input | 230 - 240V ~50Hz |
| Output | 850 - 900 Watts |
| Microwave Frequency | 2450MHz |
| Outside Dimensions | 483mm x 422mm x 281mm (width x deep x height) |
| Power consumption | |
| Microwave | 1400 - 1550 Watts |

Complies with EEC directives 89/336/EEC and 92/31/EEC.

Because we continually strive to improve our products, we may change specifications without prior notice.

The highest quality requirements are placed on our appliances. However, should a malfunction occur for which you cannot find any information in the operating instructions, please contact the store where you purchased your appliance.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from an inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Partmaster
_co.uk

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day.

Visit www.partmaster.co.uk

or call

0870 6001 338

(UK customers only)

Calls charged at National Rate.

NOTE: If you require a replacement for any of the items listed below, please quote their corresponding part numbers:

| Replacement Part | Part Number |
|--------------------|------------------|
| glass turntable | XGALK25CSSP12 |
| turntable ring | XGALK25CSSP11 |
| instruction manual | XGALK25MSSB04-V2 |



**DSG Retail Limited is responsible for after sales service.
If you have a query about the product please contact our product support line
0844 561 6263 (Currys) and 08700 118 117 (Pixmania).**

DSG Retail Limited · Maylands Avenue
Hemel Hempstead · Herts · HP2 7TG · England

